



AMERLUX[®]
LIGHTING SOLUTIONS

ADAPT. ABILITY.™

INSTALLATION INSTRUCTIONS
SHEET #: 689-0527

SPEC. SHEET
REFERENCE:
LIN 1.5D, LIN1.5DI, LIN1.5I

LIN1.5 D-WM, LIN1.5I-WM, LIN1.5 DI-WM


WALL-MOUNTED FOR INDIVIDUAL FIXTURES OR CONTINUOUSLY ROW-MOUNTED

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING .
RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

Pre-installation Note: Junction Box/ Conduit


Supplied by others: - Drywall Anchors - Wire Nuts
Supplied by Amerlux: - Mounting Brackets - Lock Screw

Mounting points for fixtures are:

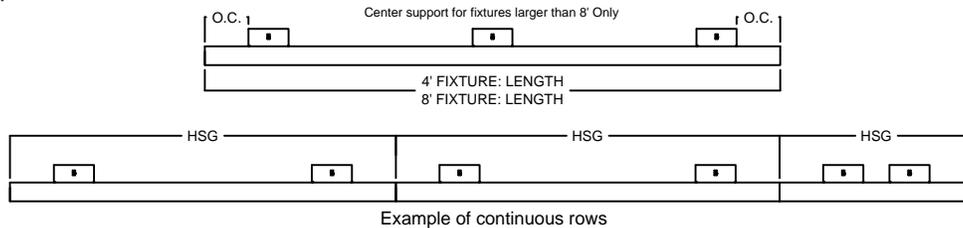

Refer to general contractor/ electrician layout for proper location of mounting points/ locations for mounting brackets.


1. Individual and Beginning of Run Install -

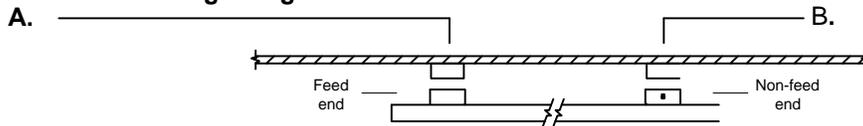

NOTE:
Installing contractor to provide support and blocking to adequately support fixture. Mounting brackets to be installed level and parallel with each other as specified on shop drawing. Contractor to SHIM Mtg. brackets to allow for variations due to SITE CONDITIONS.



2. Wall mount support bracket installation:

A. Install J-box at feed Location:

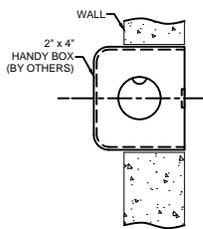


Install 2" x 4" J-box at feed location(s) 2" to 2 1/4" above where bottom edge of fixture is to be located above finished floor as shown above. For feed locations refer to *Longitudinal mounting points/feed detail* above and submittal layout(s).

B. Non-Feed

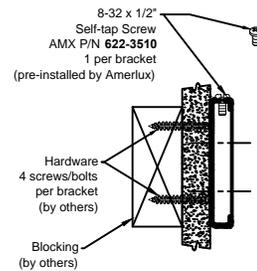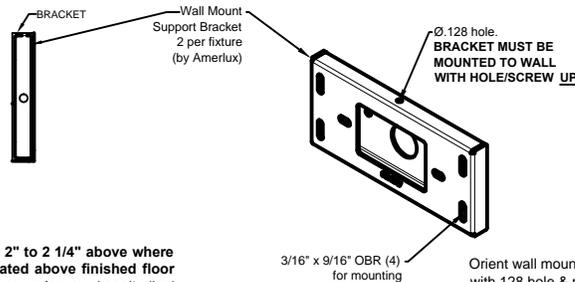

Orient wall mount support bracket with .128 hole & pre-installed screw UP as shown at left & below.

**C. Make Electrical Connections
Tuck Wires into J-Box**

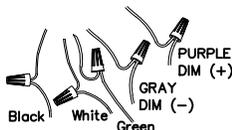

Amerlux, LLC. - 178 Bauer Drive, Oakland, NJ 07436 - T: 973-882-5010 - F: 973-882-2605
www.amerlux.com



AMERLUX[®]
LIGHTING SOLUTIONS

ADAPT. ABILITY.™

INSTALLATION INSTRUCTIONS
SHEET #: 689-0527


SPEC. SHEET
REFERENCE:
LIN 1.5D, LIN1.5DI, LIN1.5I

LIN1.5 D-WM, LIN1.5I-WM, LIN1.5 DI-WM


WALL-MOUNTED FOR INDIVIDUAL FIXTURES OR CONTINUOUSLY ROW-MOUNTED

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING .
RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

D. Install Fixtures:

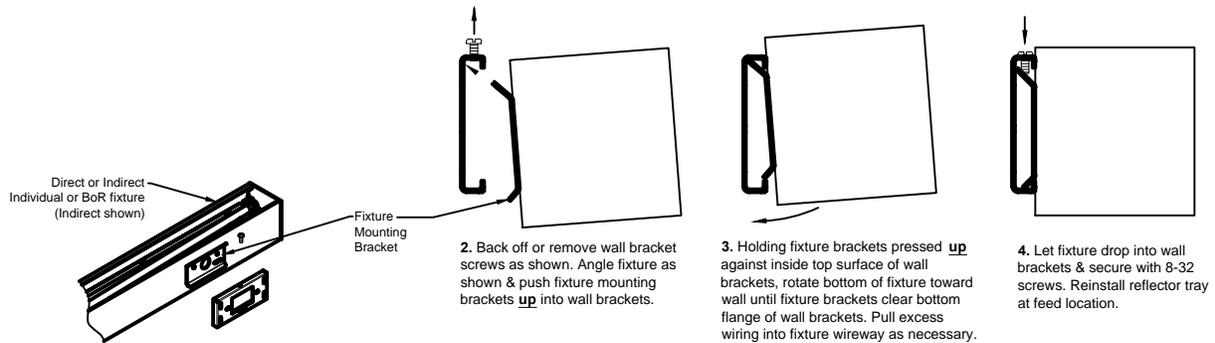

Typical Wall Mount installation of the following fixture:

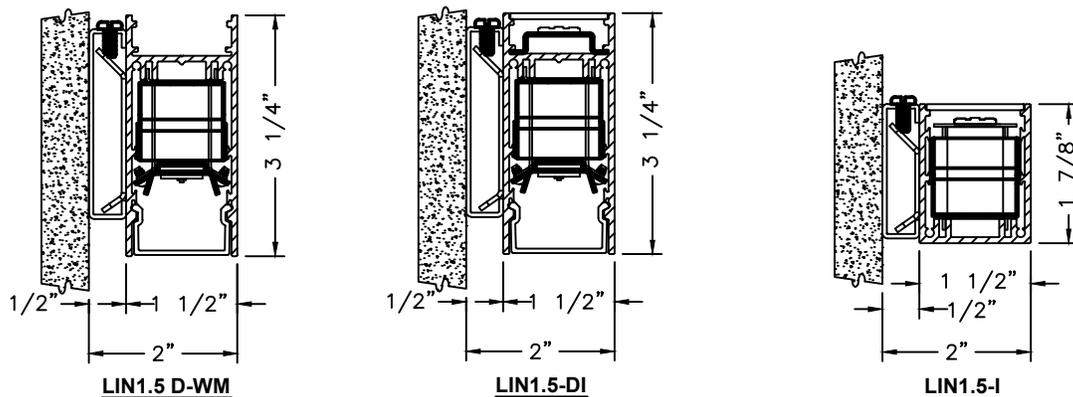

Amerlux, LLC. - 178 Bauer Drive, Oakland, NJ 07436 - T: 973-882-5010 - F: 973-882-2605
www.amerlux.com