INSTALLATION INSTRUCTIONS


QUICKLINE RECESSED 4, QLR4 GRID


DWG.# 689-0797

pg. 1 of 5

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

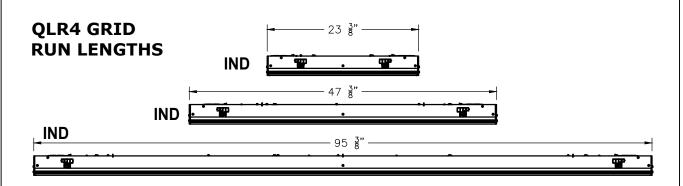

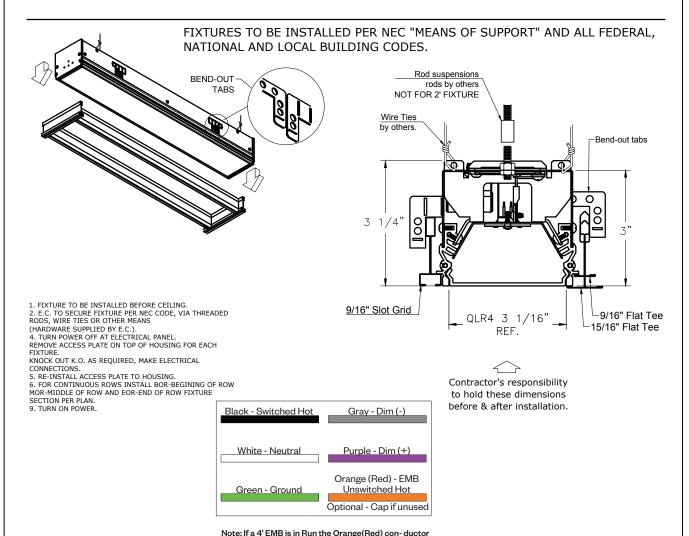

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

must be wired to an unswitched Hot.

DATE: 1/5/19 REV: 1


INSTALLATION INSTRUCTIONS

QUICKLINE RECESSED 4, QLR4 GRID

DWG.# 689-0797

pg. 2 of 5


FIXTURE IS ONLY SHIPPED AS AN INDIVIDUAL

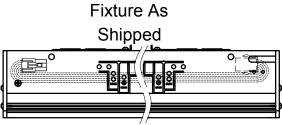



Connect Feed to appropriate Fixtures

Identify which fixtures require a feed and connect the appropriate kit.

 For detailed instructions, see installation sheet packed in Feed Kits

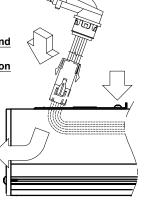


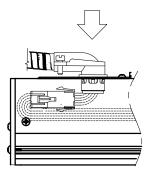



For detailed instructions on feeding power to fixtures, see installation sheets packed in Feed KITS

1. INSTALLING FIXTURE

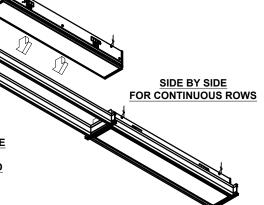

LIFT FIXTURE INTO SECURED GRID. HANDLE FIXTURE CAREFULLY TO AVOID BOWING AND/ OR FIXTURE DISTORTION. INSTALLED FIXTURE TO BE LEVEL AND SECURED TO GRID.

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 1/5/19 REV:


INSTALLATION INSTRUCTIONS

QUICKLINE RECESSED 4, QLR4 GRID


DWG.# 689-0797


pg. 3 of 5

2. SECURING FIXTURE

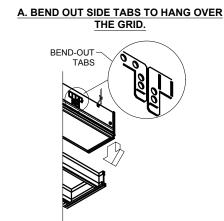

B. ONCE OVER GRID ANCHOR FIXTURE BY BENDING THE TABS ONTO THE GRID TO LOCK IT.

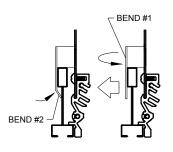

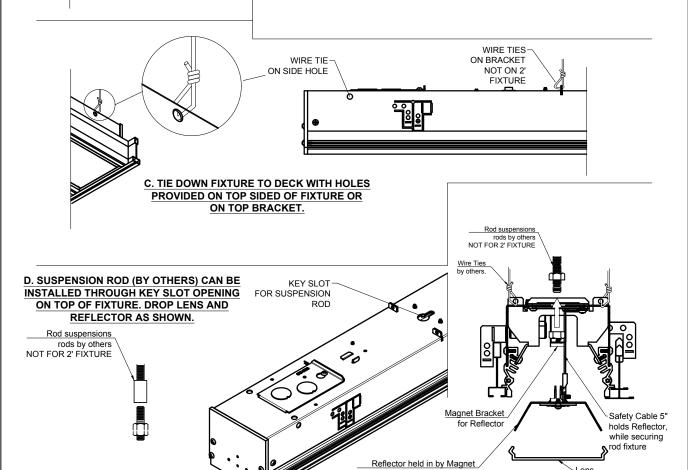

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

for Easy Removal and Reinstall

DATE: 1/5/19 REV: 1


QUICKLINE RECESSED 4, QLR4 GRID

INSTALLATION INSTRUCTIONS


DWG.# 689-0797

pg. 4 of 5

3. CONNECTING **CONTINUOUS POWER TO FIXTURES**

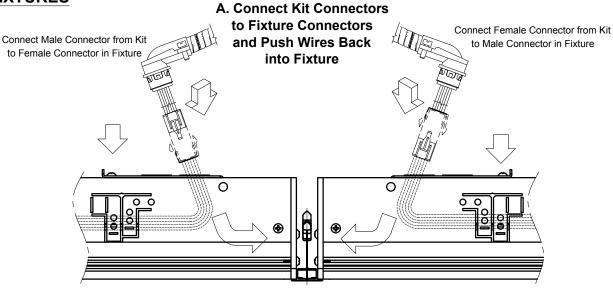

B. Push connectors into fixture as shown and secure 90° connectors.

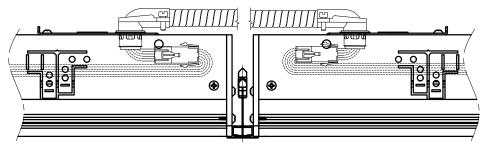

FOR DETAILED INSTALL REFER TO **INSTALL SHEET IN CONNECTOR KIT**

DATE: 1/5/19 REV:

INSTALLATION INSTRUCTIONS


QUICKLINE RECESSED 4, QLR4 GRID

DWG.# 689-0797


pg. 5 of 5




Only applies to models:

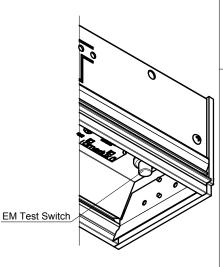





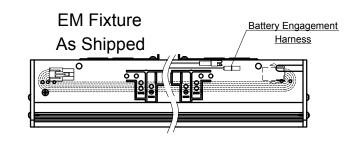


TOP VIEW FEMALE SIDE

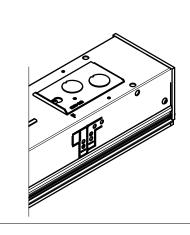

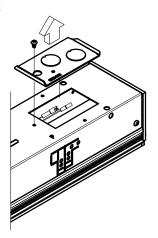

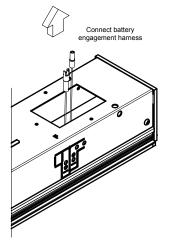

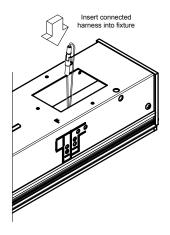

FINISHING FIXTURE

CHOOSE POWER FEED LOCATION

If fixture is MoR or EoR:
Connect Power to previous fixture once fixture is installed.

Turn on"unswitched" power to charge EM Battery (Orange lead from power drop MUST be connected to unswitched hot)

Once battery engagement harness is connected, if power is cut to unswitched line, fixture WILL light up until battery is drained.

For EM Pack safety information and instructions, see literature for Bodine BSL10LST

Continue Hanging / Joining fixtures to complete Run if necessary, otherwise install End Cap to finish fixture

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 1/15/19 REV: 1