

INSTRUCTION SHEET



PENDANT MULTIPLE AIMING & MAINTENANCE




689-0667

(shown with C3M module, same instructions for HHP module as well)

PAGE 1 OF 1




WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

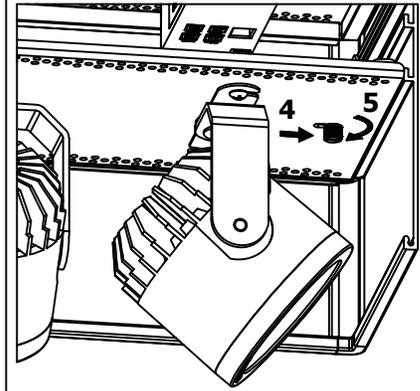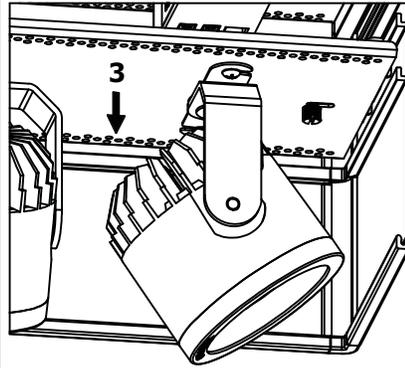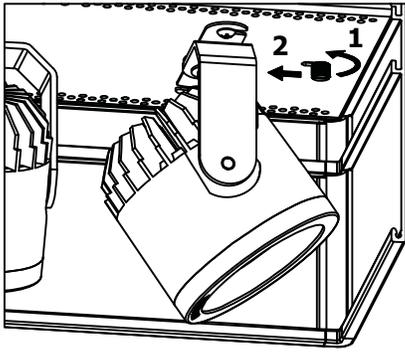




AIMING

TO SWITCH FROM RECESSED TO SEMI-RECESSED AND INCREASE MAX. AIMING FROM 35° TO 50°, **1** LOOSEN (DON'T REMOVE) TWO THUMB SCREWS, **2** SLIDE THUMB SCREWS IN, **3** LOWER HEAD PLATE TO SEMI-RECESSED SHELF, **4** SLIDE THUMB SCREWS OUT, THEN **5** TIGHTEN THUMB SCREWS

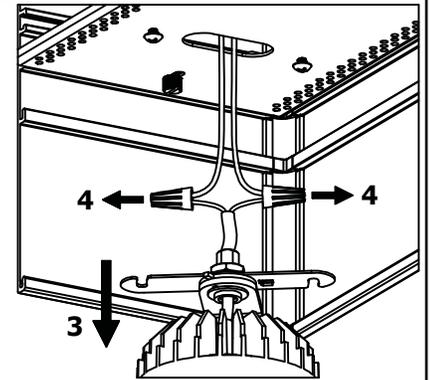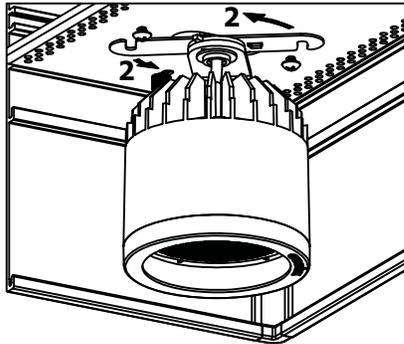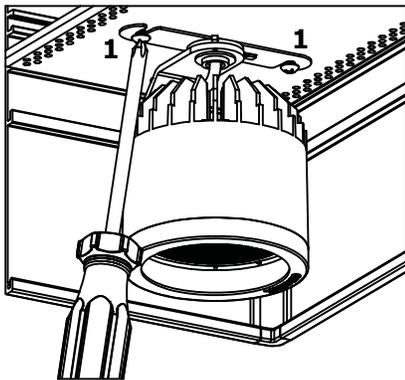

HEAD REMOVAL

1 LOOSEN (DON'T REMOVE) TWO SCREWS, **2** ROTATE HEAD COUNTER-CLOCKWISE, **3** LOWER HEAD, THEN **4** UNDO ELECTRICAL CONNECTION

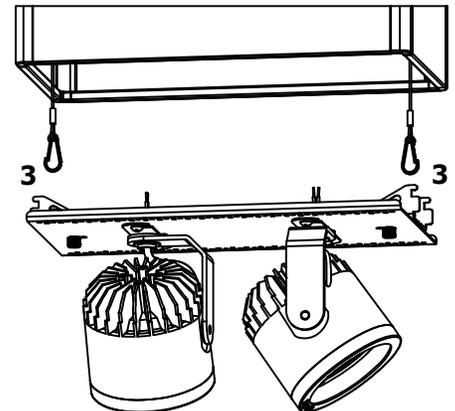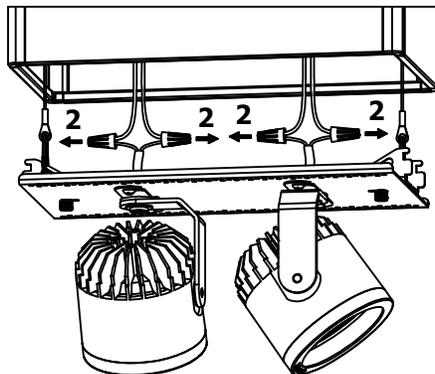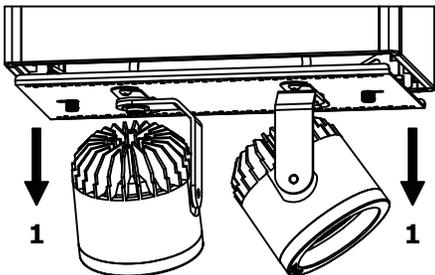

DRIVER ACCESS

PERFORM **AIMING** STEPS **1** & **2**, THEN **1** LOWER HEAD PLATE OUT OF FIXTURE, **2** UNDO ELECTRICAL CONNECTIONS BETWEEN DRIVERS AND OPTICAL HEADS, THEN **3** UNHOOK SAFETY CABLES FROM BRACKETS. EACH DRIVER IS FASTENED TO THE TOP INSIDE OF THE FIXTURE WITH TWO SCREWS.

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com