

ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0736

SPEC. SHEET REFERENCE: QLK-FF110/120

OLK-FF110/120

QLP Female Plug, 1 Circuit Feed Kit (Black or White)

 
WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING

FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.


Pre-installation Note:


Supplied by others: - 4" octogonal junction boxes W/ 2pc #8 Screws for mounting Crossbar




Install junction box - The junction box should be placed as shown to make sure that the canopy cover sits flush with the ceiling when install is finished. Refer to Spec Sheet for proper location of mounting points/ locations for junction boxes.


QLK-FF110/120 Contents

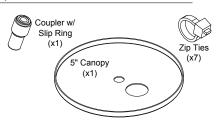


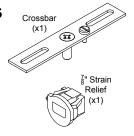

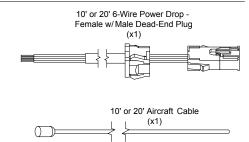

Prep J-Box @ Ceiling

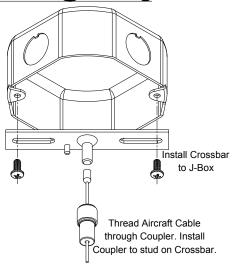

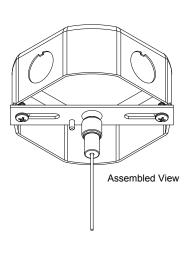

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com


AMERLUX® ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0736

B. Connect


Drop to Fixture

Harness


Feeding at Beginning of a Run (BoR/IND)

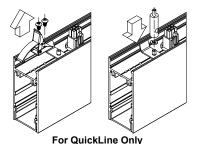


Remove Latch / Install Cable Gripper. Detailed Instructions in kit QLP-ECs

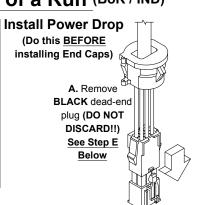


C. Feed Harness in at angle as shown. From open end, grab and pull harness outward

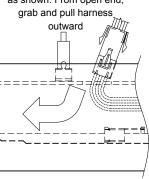

D. Insert Strain Relief and snap into provided hole

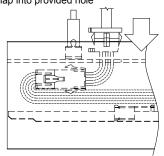

 
Failure to install feed at an angle as shown will result in LED reflector becoming disengaged.



End Cap can be installed after Feed Cord is installed (See Instructions in kit QLP-ECs)

For runs with (2) or More Feeds (OPTIONAL)

E. If run has (2) or more Power Feeds, Dead-End power harnesses at appropriate fixture breaks using provided BLACK Plugs / Caps

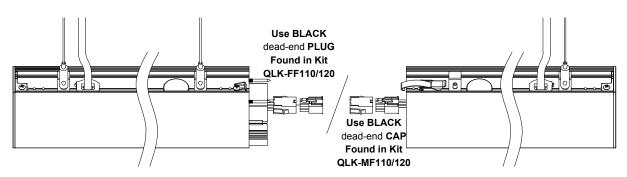

DO NOT FEED A CONTINUOUS RUN IN (2) OR MORE LOCATIONS.


CONTINUOUS RUN POWER MUST BE BROKEN VIA DEAD-END CAPS/PLUGS


Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com



AMERLUX® ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0736


Connecting Fixture/Run to Power @ J-Box

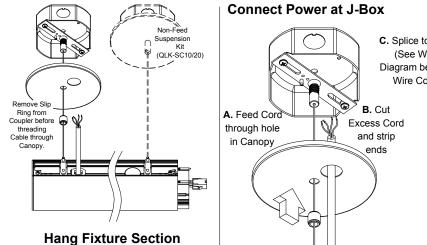

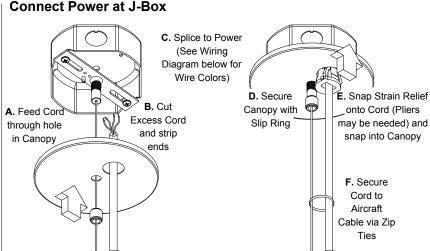


Wiring Schematic

 See Detailed Instructions packed with Fixture



Dimmer: 0-10V (By Others)

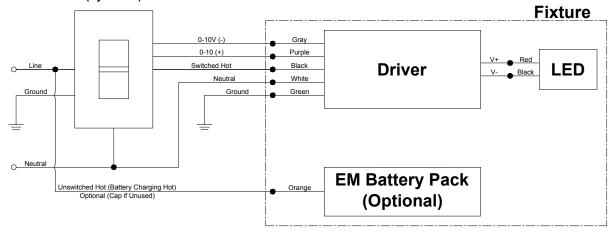

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com