


WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

- 1** FEED HOUSE WIRES THROUGH MOUNTING PLATE, THEN ATTACH PLATE TO J-BOX WITH HARDWARE (BY OTHERS)
- 2** FEED WIRES THROUGH CANOPY & CLEAT, THEN ATTACH BOTH TO MOUNTING PLATE WITH AMERLUX CLEAT SCREWS
- 3** WIRE MALE HARNESS FROM MOUNTING KIT TO HOUSE WIRES (SEE DIAGRAMS ON PAGE 2)
- 4** WHILE SUPPORTING FIXTURE, CONNECT MALE HARNESS TO FEMALE HARNESS FROM FIXTURE
- 5** FEED ELECTRICAL CONNECTION INTO J-BOX, LOCATE WALL ARM BRACKET PINS ONTO BACKSIDE OF CLEAT BOTTOM, THEN TILT FIXTURE UP AND TOWARDS WALL
- 6** FULLY TIGHTEN PHILLIPS SCREWS (x2) ON TOP OF WALL ARM BRACKET

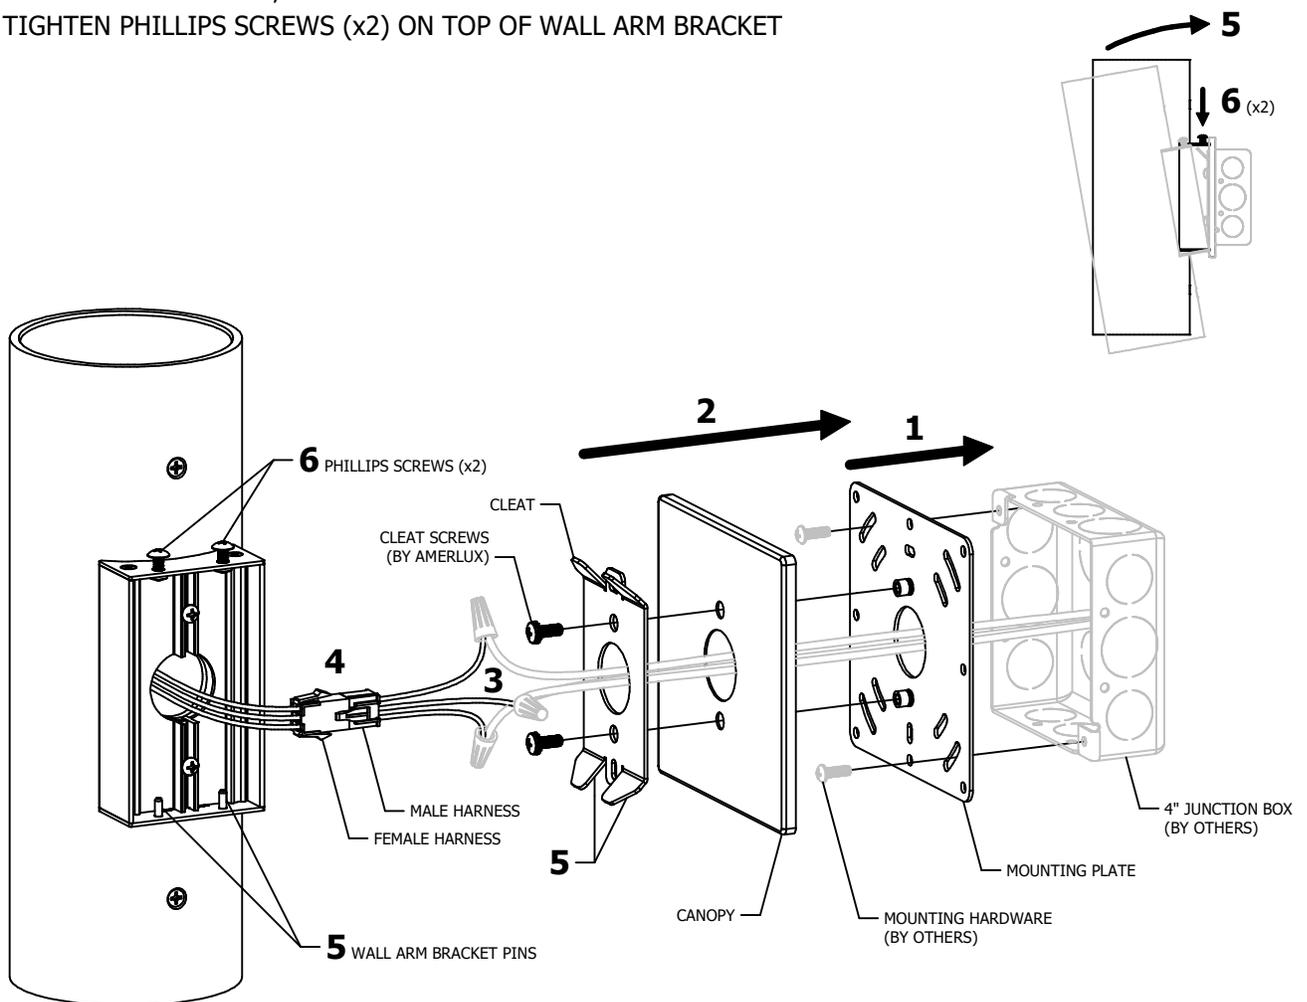

NOTES:

- A. FOR INDIRECT ONLY FIXTURE, USE INCLUDED "FLIP KIT"
- B. FOR REMOTE OR POE DRIVER, JOIN INDIVIDUALLY LABELED WIRES USING SUPPLIED WAGO CONNECTORS

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com



INSTRUCTION SHEET

ROOK CANOPY WALL MOUNT


689-0838

PAGE 2 OF 2


WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.


LE/TE

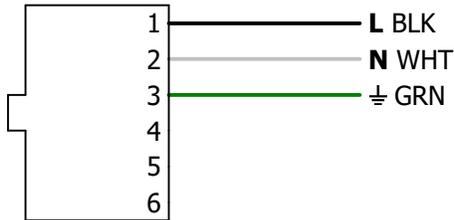


LE/TE DIRECT/INDIRECT

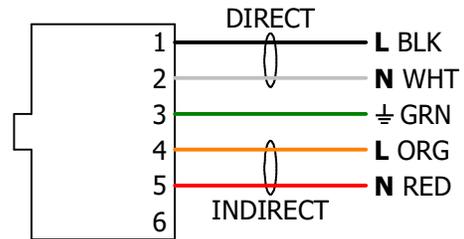


0-10V

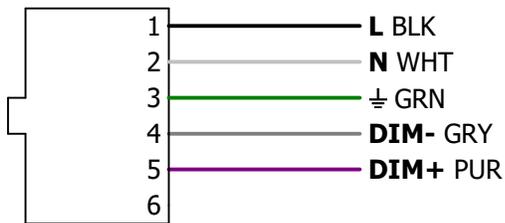


0-10V DIRECT/INDIRECT

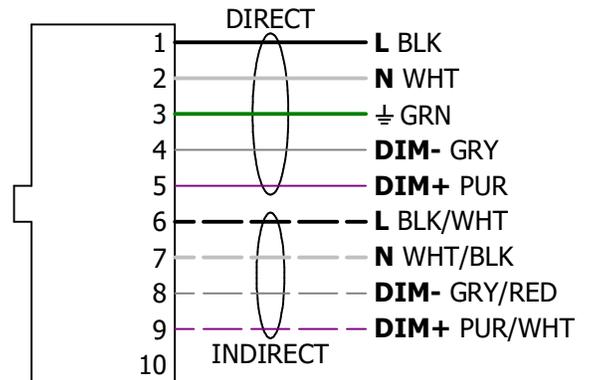

HILUME-H-ECO

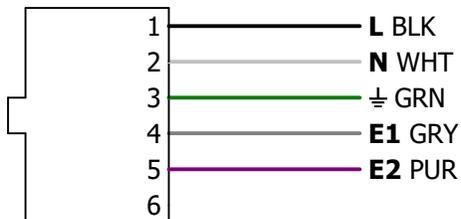

HILUME-H-ECO DIRECT/INDIRECT

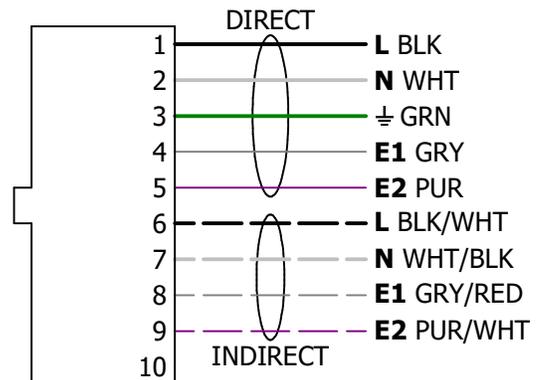

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com