
INSTRUCTION SHEET



689-20090

FINCH DOWNLIGHT TRIM INSTALLATION

PAGE 1 OF 1 WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. **RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.** amerlux QUICK DISCONNECT PLUG PIGTAIL TO BE CONNECTED TO TRIM (RETRIEVE THROUGH APERTURE) S QUICK DISCONNECT (TO BE CONNECTED **TO MATING HARNESS** FROM THE FRAME) CONNECT TORSION SPRING **TYPICAL WALLWASH TYPICAL DOWNLIGHT** TRIM TRIM Ø SWING SWING UP UP PUSH UP **ATTENTION: USE CAUTION INSTALLING** AND REMOVING THIS TRIM. TORSION SPRING UNDER TENSION.

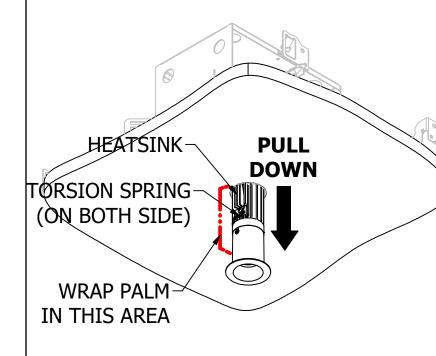

TO REMOVE TRIM:

TIP: WEAR PROTECTIVE GLOVES.

1. PULL DOWN ON THE TRIM.

TIP: USE YOUR THUMB AGAINST THE CEILING FOR LEVERAGE. IF IT IS TOO DIFFICULT TO PULL DOWN THEN TRY TO ROTATE TRIM LEFT OR RIGHT THEN PULLING DOWN ON TRIM.

2. USE CAUTION. TORSION SPRING UNDER TENSION.

TIP: WHEN TORSION SPRINGS BECOME VISIBLE, WRAP YOUR PALM AROUND THE HEATSINK THEN PULL TRIM DOWN.

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com