

INSTRUCTION SHEET




HDL2.5-RA/SA TRIM INSTALLATION

689-20161


PAGE 1 OF 3

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

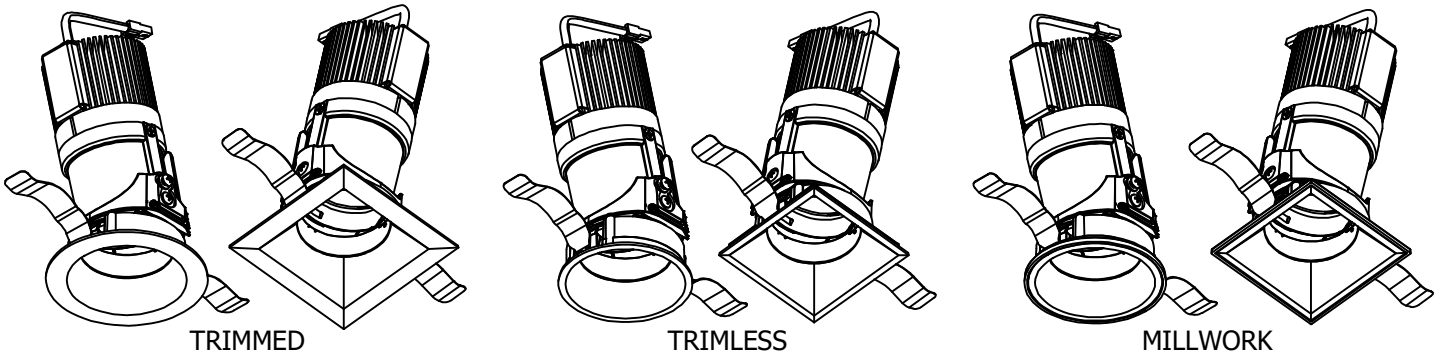

1. MAKE ELECTRICAL CONNECTION.
CONNECT THE OPTICAL HEAD
HARNESS TO THE FRAME HARNESS
2. COMPRESS AND HOLD 2X SPRING CLIPS.
3. INSERT OPTICAL HEAD INTO CEILING CUTOUT.

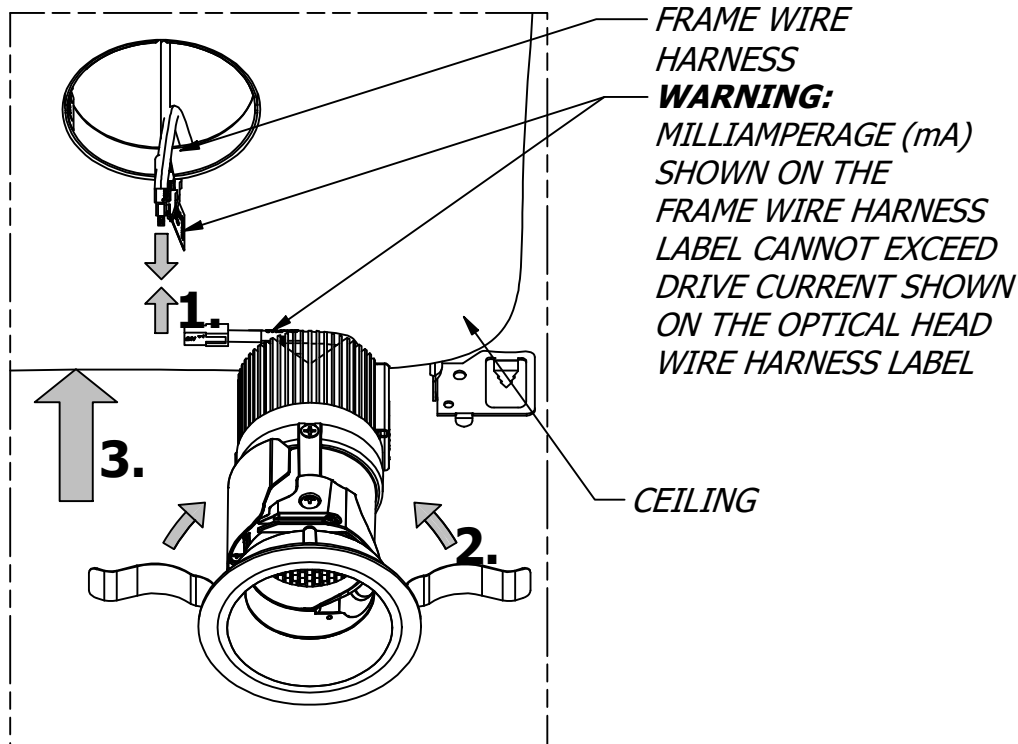

NOTE: HDL2.5-R TRIM SHOWN, FOLLOW THE SAME STEPS FOR SQUARE

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

**INSTRUCTION
SHEET**



HDL2.5-RA/SA TRIM INSTALLATION





689-20161

PAGE 2 OF 3

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

**OPTICAL HEAD ADJUSTMENT:
360° ROTATION, 40° TILT, 3/4" SHIFT.**

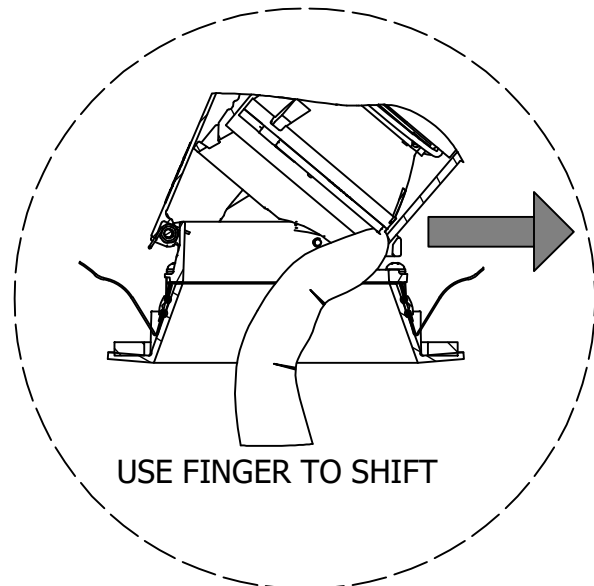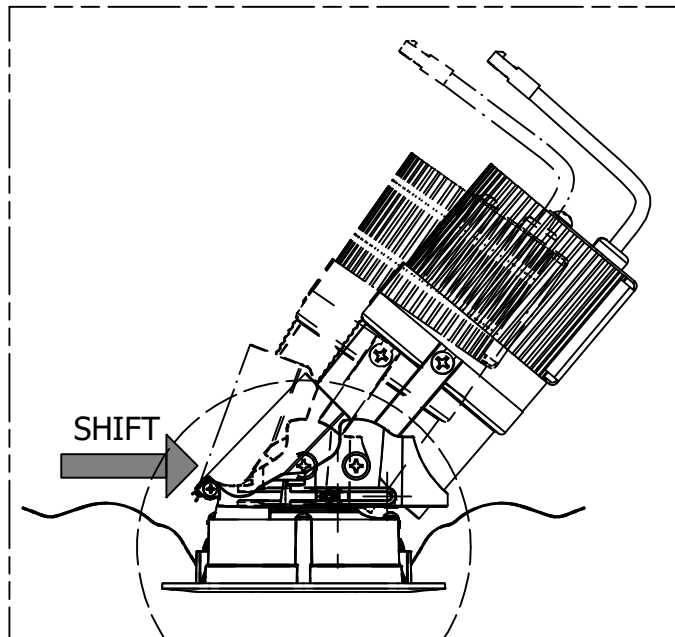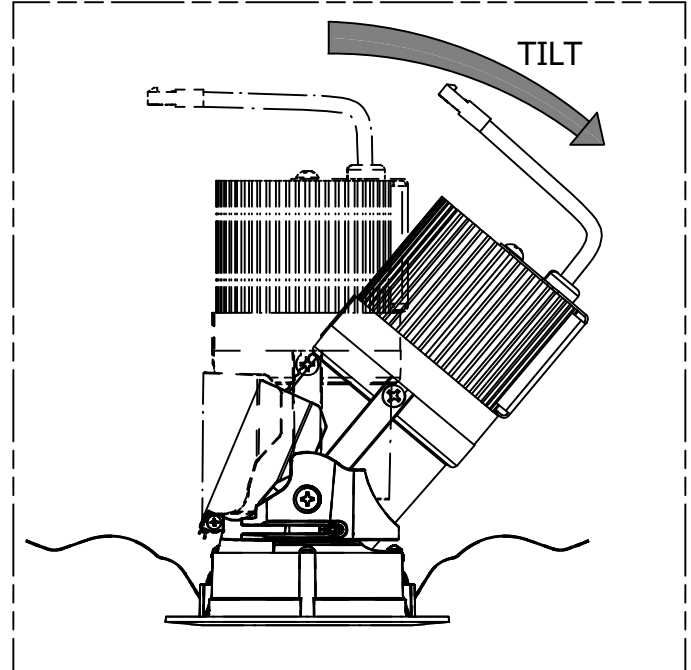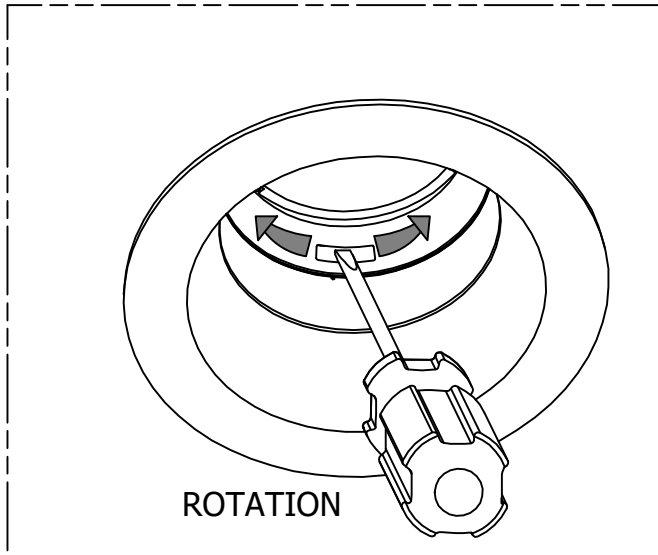

NOTE: HDL2.5-R TRIM SHOWN, FOLLOW THE SAME STEPS FOR SQUARE

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

**INSTRUCTION
SHEET**



HDL2.5-RA/SA TRIM INSTALLATION


689-20161

PAGE 3 OF 3

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

**LED ENGINE AND BEAM
CHANGE OUT**

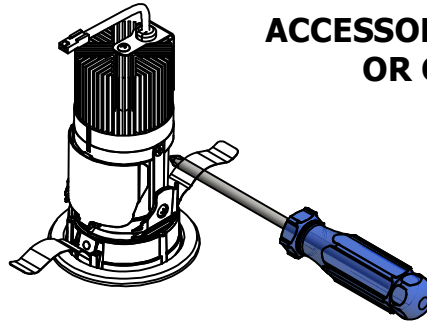


**ACCESSORY INSTALLATION
OR CHANGE OUT**


- 1. LOOSEN
TWO SCREWS.**

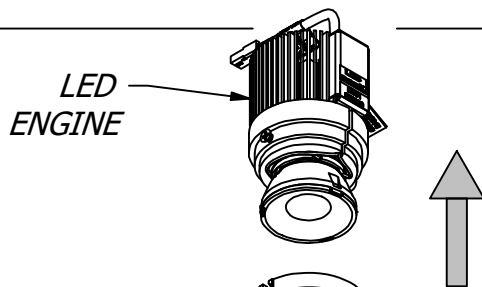

- 2. REMOVE
LED ENGINE
FROM THE TRIM**

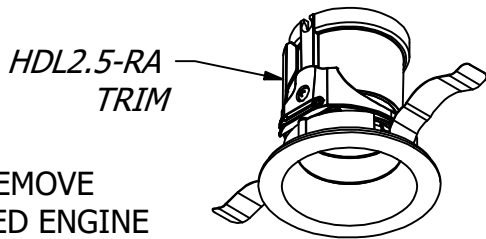



BEAM CHANGE OUT

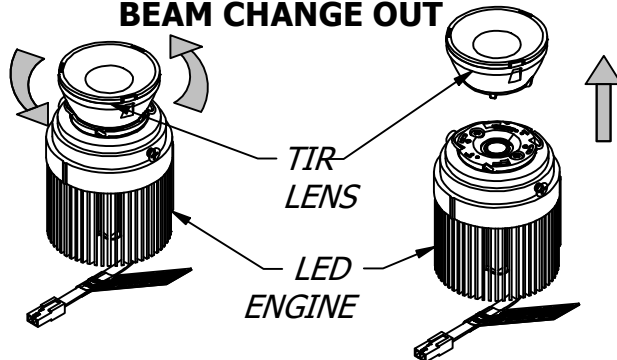

- 3.a ROTATE TIR LENS
COUNTERCLOCKWISE**

3.b

- 1. LOOSEN
TWO SCREWS**

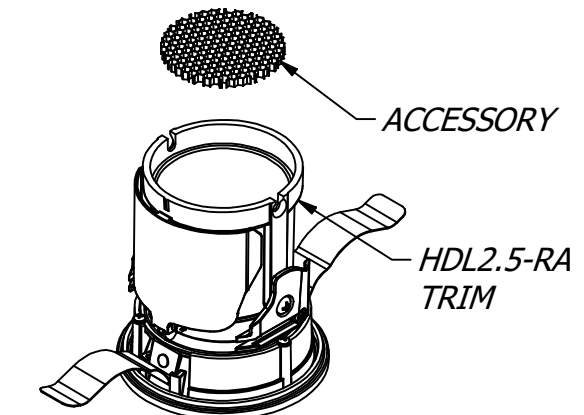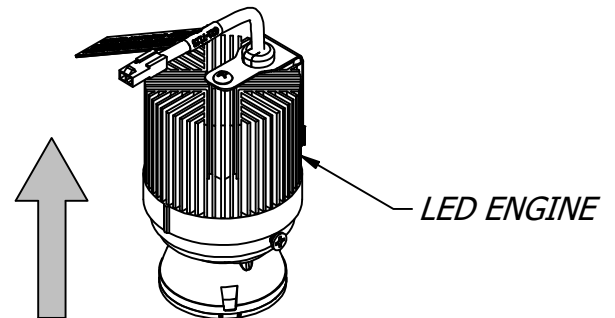

- 2. REMOVE LED ENGINE
AND ACCESSORY FROM THE TRIM**

REASSEMBLE IN REVERSE ORDER

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com