

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

INSTRUCTION SHEET

GLOBAL LIGHTING SOLUTIONS

Fino Installation Sheet

689-0407 PAGE 2 OF 3

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.



INSTRUCTION SHEET



689-0407

PAGE 3 OF 3

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

Fino Installation Sheet

For Runs

A. Cut hole in wall 1" longer than total run length, to allow room to install.

B. Mount first fixture in run following steps 1-4 on page 1

C. To mount consecutive fixtures position driver box and connect, then locate pins (shown at right) and slide them into the other fixture.

D. Secure catch and latch, unless fixture seam falls on a stud. If this is the case remove catch and latch.

Continue from step 3 on Page 1.

E. Make sure to fill / mud 1" gap in end of run when installation of run is complete.





DRIVER BOX DIMENSION INFO



Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com