amerlux

INSTALLATION INSTRUCTIONS

GRUV2.5-GB-LED

GYPSUM BOARD CEILING

689-0424

DWG.#


Pg. 1 of 6

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING

FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

Suspension Points

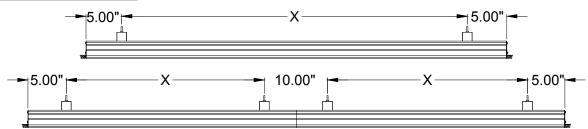

Example of a continuous row

Individual Installation -

1. Hang the Fixture via wire and/or threaded rods. (Optional) BLOCKING as shown by others.

*: Fixture MUST be mounted before ceiling is installed.

2. Once the fixture is secure, feed power source through provided

code.

Splice to harness according to by others

Optional - Hanging the Fixture Via Threaded Rods. (Using Yoke) 1. Insert \(\frac{1}{4}\)-20 Bolt and

- secure with nut. (supplied by others)
- 2. Secure to structure via coupling (supplied by others)
- 3. Remove 7/8" plug in top of housing at power feed location. Optional feed location thru KO in End Plate.

Fixtures sharing regular and EM power


in single feed: Junction box must be partitioned per local and national electric codes.

See wiring schematic provided with fixture for wire colors and their specific functions as different fixture options may use wires for different purposes.

DO NOT CONNECT CONTROL WIRES TO LINE VOLTAGE.

Amerlux is not liable for damage due to miswiring.

Contact factory with any questions.

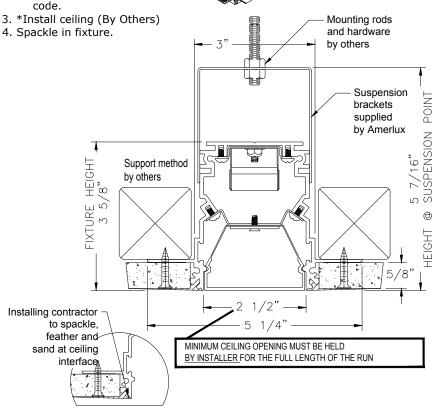

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 09/10/18




GRUV2.5-GB-LED GYPSUM BOARD CEILING

DWG.#


689-0424

Pg. 2 of 6

Assembling Continuous Rows-

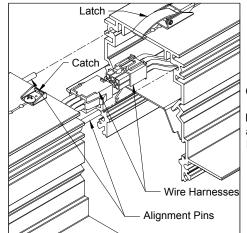

Joining the Housings Connect power from one fixture to the next using quick connects provided. Line up the two housings by using the alignment pins. Secure them together by using the Catch and Latch System on the top of the extrusion.

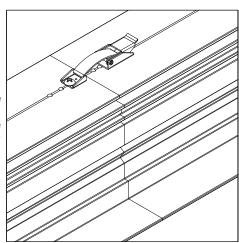

*: Fixture MUST be mounted before ceiling is installed.

Maintenance

- -Make sure to turn off all power to fixture before maintenance.
- -Prior to ANY work, touch metal on fixture to discharge any build up of static electricity.
- -To access internal components, first remove lens.

1.) LED Fixture:

Consult Ameriux for LED maintenance.

2.) LED Replacement:

For LED board replacement reference 689-0600 Instruction Sheet

3.) Reflector Removal:

See diagram

4.) Driver maintenance:

Driver plates are located beneath reflectors

Remove nuts to remove driver


For driver replacement, please specify:

Manufacturer, Model No, and Current Setting (mA).

See 710-0134 Wiring Schematic for standard fixtures

See 710-1080 Wiring Schematic for 2-Color tunable white fixtures

Reflector Removal

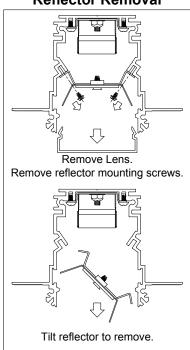

MAKE SURE TO DISCONNECT ALL ELECTRICAL CONNECTIONS BEFORE ACCESSING LED.

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 09/10/18

REV:

DWG.#

GRUV2.5-GB-LED (WALL MOUNT) GYPSUM BOARD WALL

689-0424

Pg. 3 of 6

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING

FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.




Example of a continuous row

FIXTURE HEIGHT





using Self-drilling screws (by others) thru Fixture Flange as shown.

- power source through the knock-out. Splice to harness according to code.

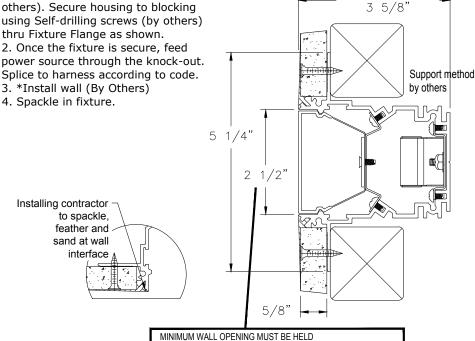

  BY INSTALLER FOR THE FULL LENGTH OF THE RUN





Remove 7/8" plug in top of housing at power feed location. optional feed location thru KO in End Plate.

Fixtures sharing regular and EM power in single feed:

Junction box must be partitioned per local and national electric codes.

See wiring schematic provided with fixture for wire colors and their specific functions as different fixture options may use wires for different purposes.

DO NOT CONNECT CONTROL WIRES TO LINE VOLTAGE.

Amerlux is not liable for damage due to miswiring.

Contact factory with any questions.


Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

GRUV2.5-GB-LED (WALL/CEILING CORNER) GYPSUM BOARD CEILING/WALL


DWG.# 689-0424

Pg. 4 of 6

 Wall/Ceiling Corner Installation




- 1. Install Vertical fixture(s) from the ground up. Secure fixtures following instructions from pages 1-3.
- 2. Once the fixture is secure, feed power source through the knock-out. Splice to harness according to code.

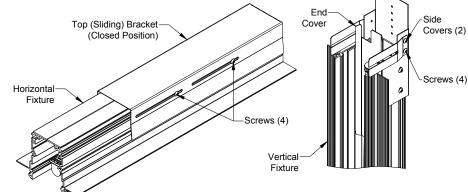

3. Install Horizontal fixture(s) closest to corner.


A. Lift fixture to ceiling. Shift housing over vertical housing. (Overlap min. of $\frac{1}{4}$ ", max. 2 $\frac{1}{2}$ ") Reference layout drawing for location.

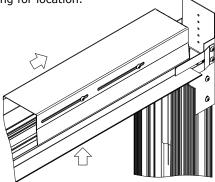


B. Loosen the 4 side screws to the Top Bracket. Slide Top Bracket to wall and tighten the 4 side screws. C. (Optional) Secure vertical and

horizontal brackets with self-drilling screw (by others). D. Remove End Covers and connect

 
wire harnesses from the two fixtures. Install End Covers. E. Secure fixtures following



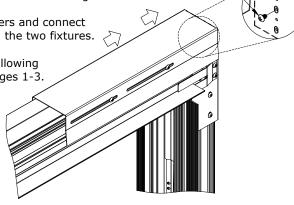


#8 x 3 Self-Drilling

Screw (by others

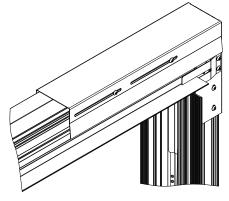

 - 4. * Install wall (By Others)
- 5. Spackle in fixture.



*: Fixture MUST be mounted before wall/ceiling is installed.

DATE: 09/10/18

REV:




DWG.# 689-0424

GRUV2.5-GB-LED (WALL/CEILING CORNER) GYPSUM BOARD CEILING/WALL

Pg. 4 of 6

 
Wall/Ceiling Corner Installation - "U" Pattern




- 1. Repeat steps 1-3 from L-Pattern Installation sheet on page 4.
- 2. Once the fixture is secure, feed power source through the knock-out.


Splice to harness according to code

- 3. Continue installing rest of Horizontal fixtures.
- 4. Install Horizontal fixture closest to corner.
- A. Loosen the 4 side screws to the Top Bracket. Slide Top Bracket to wall and tighten the 4 side

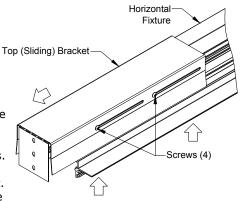

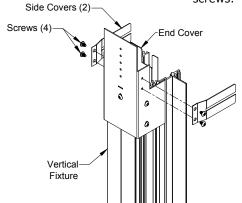

- 5. Install Vertical fixture closest to corner.
- A. Remove Side Covers.
- B. Mount fixture so top edge of extrusion on the vertical fixture is flush with horizontal fixture. (Overlap min. of $\frac{1}{4}$ ", max. $2\frac{1}{2}$ ") Reference layout drawing for location.
- C. Re-Install Side Covers
- D. Remove End Covers and connect wire harnesses from the two fixtures. Install End Covers.
- E. Secure fixtures following instructions from pages 1-3.

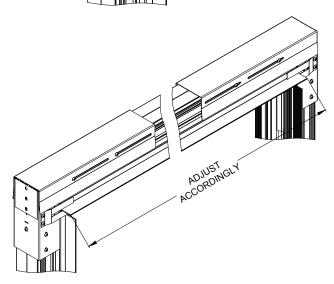

- 6. * Install wall (By Others)
- 7. Spackle in fixture.

*: Fixture MUST be mounted before wall/ceiling is installed.

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 09/10/18

REV:

amerlux

INSTALLATION INSTRUCTIONS

DWG.#

689-0424

Pg. 6 of 6

GRUV2.5-GB-LED GYPSUM BOARD CEILING/WALL

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING

FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

Additional feed (if required)

See wiring schematic provided with fixture for wire colors and their specific functions as different fixture options may use wires for different purposes.

