ameriux LIN2.5DI & LIN2.5D

INSTALLATION INSTRUCTIONS

DWG.#

LIN2.5DI & LIN2.5D CABLE MOUNTED PENDANT 689-0055

Pg. 1 of 4

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

 
Pre-installation Note:

Supplied by others: - 4" octagonal junction boxes

Supplied by Amerlux: - canopies

- suspension cable

Suspension points for fixtures are:




Refer to general contractor/ electrician layout for proper location of mounting points/ locations for junction boxes.


1.Install junction box(es) - The junction box should be regressed as shown to make sure that the canopy cover sits flush with the ceiling when install is finished.



Non-feed

Fixtures sharing regular and EM power in single feed: Junction box must be partitioned per local and national electric codes.

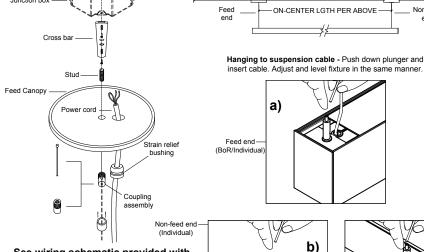

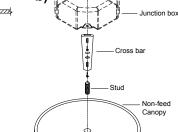

Coupling assembly

Non-feed end (BoR joining end)

See wiring schematic provided with fixture for wire colors and their specific functions as different fixture options may use wires for different purposes.

DO NOT CONNECT CONTROL WIRES TO LINE VOLTAGE.

Ameriux is not liable for damage due to

miswiring.

Contact factory with any questions.

Tape used to secure indirect lens during shipping. Remove after installation.

b)

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 02/18/20 REV:




INSTALLATION INSTRUCTIONS


LIN2.5DI & LIN2.5D


CABLE MOUNTED PENDANT


Dwg.#
689-0055
Pg. 2 of 4



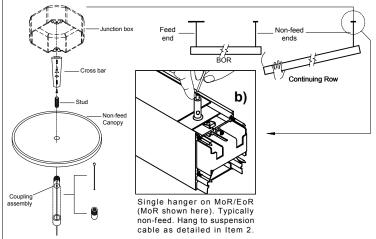


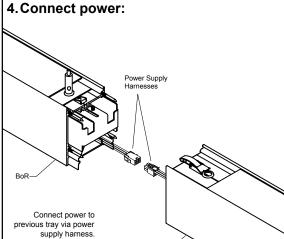

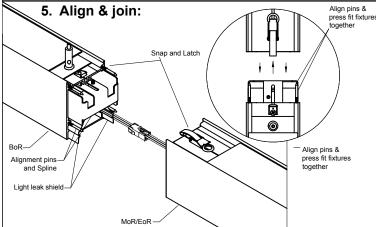

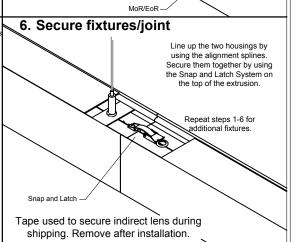

7. Check light leak shield

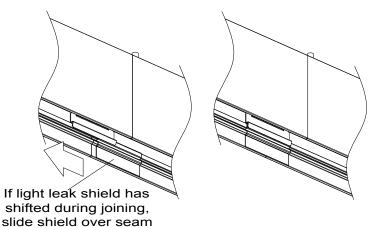

MAKE SURE TO DISCONNECT ALL ELECTRICAL CONNECTIONS BEFORE MAINTENANCE.

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 02/18/20 REV:



INSTALLATION INSTRUCTIONS

LIN2.5DI & LIN2.5D CABLE MOUNTED PENDANT DWG.#

689-0055

Pg. 3 of 4

Maintenance

-Make sure to turn off all power to fixture before maintenance.

-Prior to ANY work, touch metal on fixture to discharge any build up of static electricity.

-To access internal components, first remove lens.

1.) LED Fixture:

Consult Ameriux for LED maintenance.

2.) LED Replacement:

For LED board replacement reference 689-0600 Instruction Sheet

3.) Reflector Removal:

See page 3 for reflector removal instructions.

4.) Driver maintenance:

Drivers are located beneath bottom reflectors, secured by (2) clips 628-0197.


Remove 1 clip and loosen other to remove driver

For driver replacement, please specify:

Manufacturer, Model No, and Current Setting (____mA

See 710-0134 Wiring Schematic for standard fixtures


See 710-1080 Wiring Schematic for 2-Color tunable white fixtures

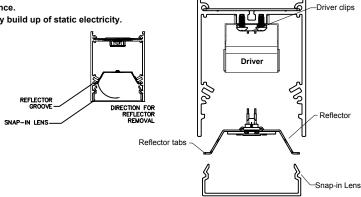

MAKE SURE TO DISCONNECT ALL ELECTRICAL CONNECTIONS BEFORE MAINTENANCE.

DATE: 02/18/20

 REV: 2




INSTALLATION INSTRUCTIONS

DWG.#


689-0055

Pg. 4 of 4




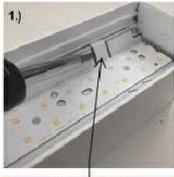

) USE FLATHEAD TO GENTLY PRY TAB . UNDO BOTH TABS ON SAME SIDE FIRST

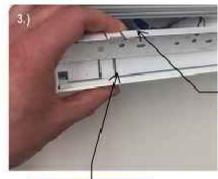

 PUSH OPPOSITE SIDE BACK INTO PLACE AND SECURE REFLECTOR







- 1.) REFLECTOR IS LOCATED BENEATH SNAP-IN LENS, SECURED BY (2) CLIPS ON BOTH SIDES. LOCATE THE CLIPS HOLDING THE REFLECTOR IN PLACE AND GENTLY PRY THE CLIPS AWAY FROM THE GROOVE SLIGHTLY, AS TO NOT BEND COMPLETELY OUT OF SHAPE. THIS CAN BE DONE WITH THE HELP OF A FLAT HEAD SCREW DRIVER.
- 2.) ONCE YOU HAVE PRIED ONE SIDE OUT OF THE GROOVE THE REFLECTOR SHOULD EASILY COME OUT OF THE HOUSING. IF NOT, LIGHTLY PULL TOWARDS YOU ON THE SIDE YOU HAVE UN-CLIPED AND THIS WILL ALLOW REFLECTOR TO GENTLY COME OUT.
- 3.) TO REINSTALL LOCATE GROOVE THAT PREVIOUSLY HELD CLIP IN PLACE AND TILT REFLECTOR INTO PLACE ON ONE SIDE
- 4.) ONCE IN THE CORRECT POSITION, GENTLY RE-CLIP OPPOSITE SIDE INTO GROOVE, REQUIRES MINIMAL PRESSURE.

MAKE SURE TO DISCONNECT ALL ELECTRICAL CONNECTIONS BEFORE MAINTENANCE.

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

DATE: 02/18/20

REV: 2