INSTRUCTION SHEET





PENDANT MULTIPLE AIMING & MAINTENANCE


689-0667

PAGE 1 OF 1

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

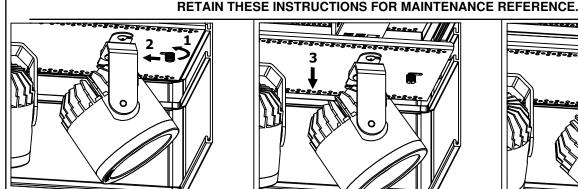


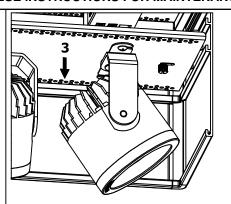


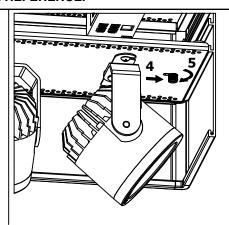


AIMING

TO SWITCH FROM RECESSED TO SEMI-RECESSED AND INCREASE MAX. AIMING FROM 35° TO 50°, 1 LOOSEN (DON'T REMOVE) TWO THUMB SCREWS, 2 SLIDE THUMB SCREWS IN, 3 LOWER HEAD PLATE TO SEMI-RECESSED SHELF, 4 SLIDE THUMB SCREWS OUT, THEN 5 TIGHTEN THUMB SCREWS

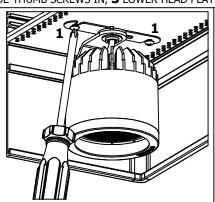


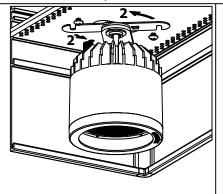


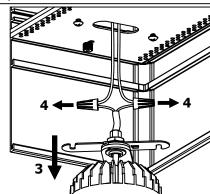


HEAD REMOVAL

1 LOOSEN (DON'T REMOVE) TWO SCREWS, 2 ROTATE HEAD COUNTER-CLOCKWISE, 3 LOWER HEAD, THEN 4 UNDO ELECTRICAL CONNECTION

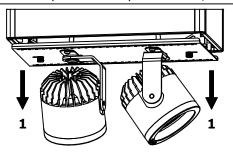

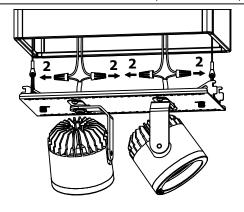

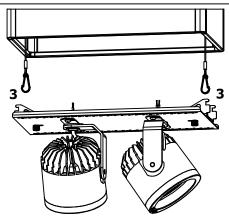

DRIVER ACCESS

PERFORM AIMING STEPS 1 & 2, THEN 1 LOWER HEAD PLATE OUT OF FIXTURE, 2 UNDO ELECTRICAL CONNECTIONS BETWEEN DRIVERS AND OPTICAL HEADS, THEN 3 UNHOOK SAFETY CABLES FROM BRACKETS. EACH DRIVER IS FASTENED TO THE TOP INSIDE OF THE FIXTURE WITH TWO SCREWS.

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com