


**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

- 1** FEED HOUSE WIRES THROUGH CLEAT CENTERHOLE, THEN MOUNT CLEAT TO J-BOX WITH HARDWARE (BY OTHERS)
- 2** WIRE MALE HARNESS FROM MOUNTING KIT TO HOUSE WIRES (SEE DIAGRAMS ON PAGE 2)
- 3** WHILE SUPPORTING FIXTURE, CONNECT MALE HARNESS TO FEMALE HARNESS FROM FIXTURE
- 4** FEED ELECTRICAL CONNECTION INTO J-BOX, LOCATE WALL ARM BRACKET PINS ONTO BACKSIDE OF CLEAT BOTTOM, THEN TILT FIXTURE UP AND TOWARDS WALL
- 5** FULLY TIGHTEN PHILLIPS SCREWS (x2) ON TOP OF WALL ARM BRACKET

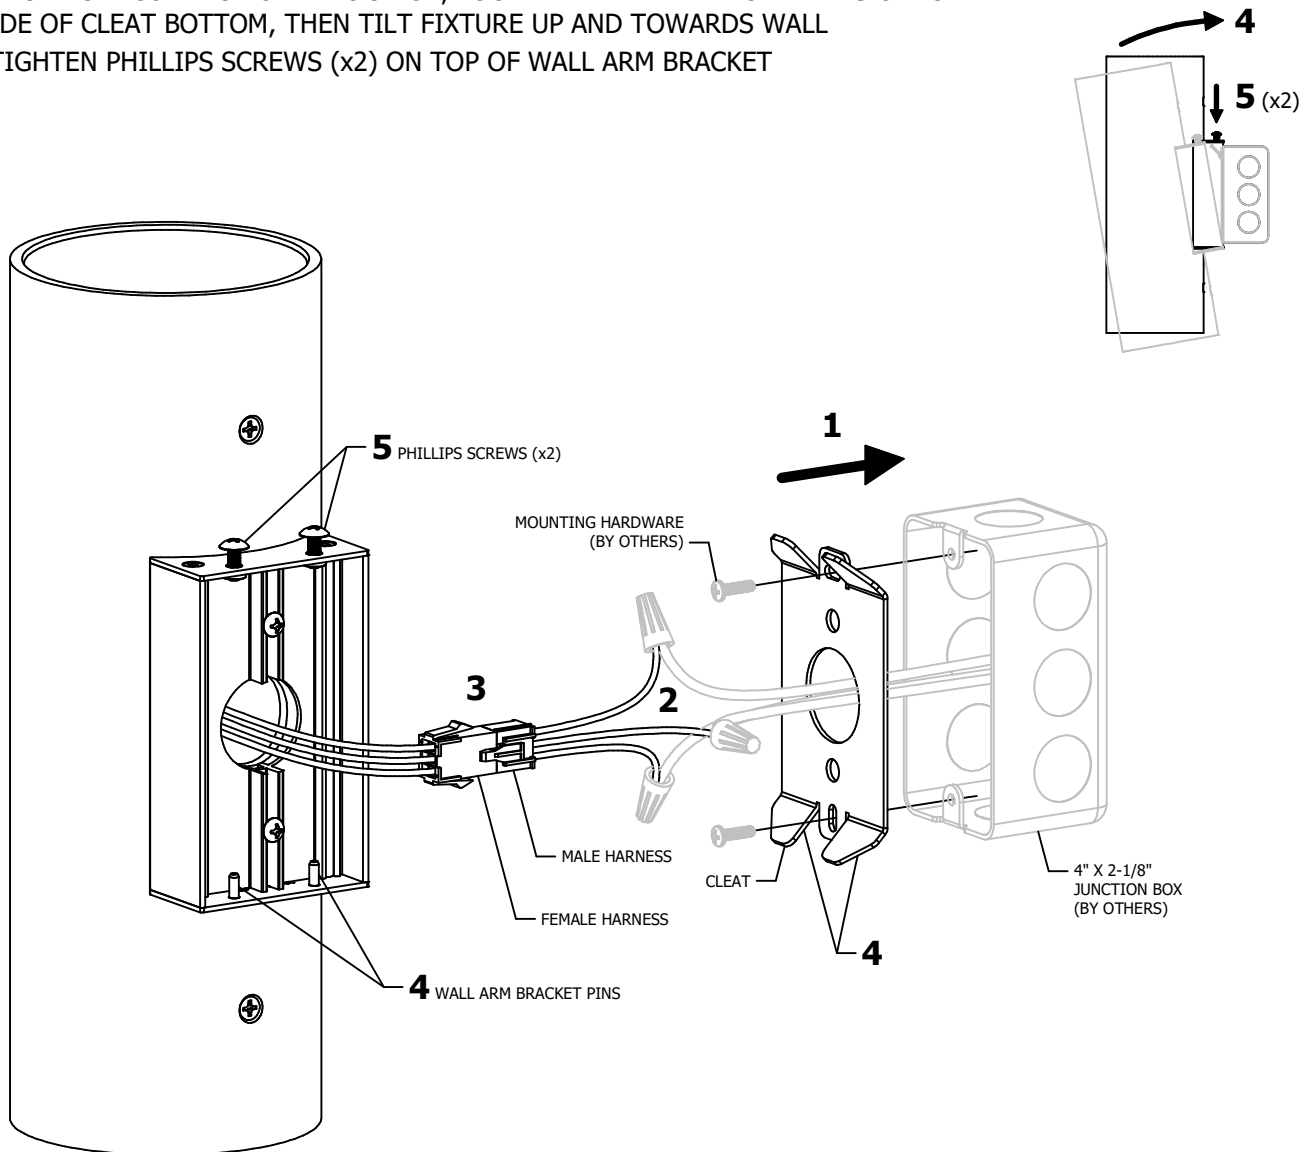

**NOTES:**

- A. FOR INDIRECT ONLY FIXTURE, USE INCLUDED "FLIP KIT"
- B. FOR REMOTE OR POE DRIVER, JOIN INDIVIDUALLY LABELED WIRES USING SUPPLIED WAGO CONNECTORS

**Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 [www.amerlux.com](http://www.amerlux.com)**



**INSTRUCTION SHEET**

**ROOK WALL MOUNT**


**689-0837**

PAGE 2 OF 2


**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**


LE/TE

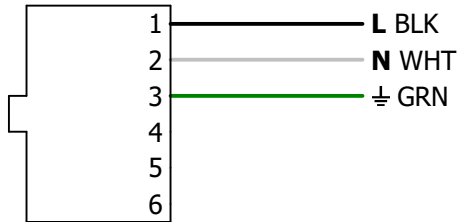


LE/TE DIRECT/INDIRECT

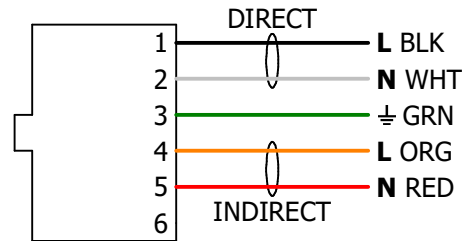


0-10V

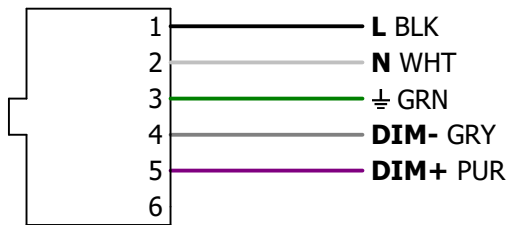


0-10V DIRECT/INDIRECT

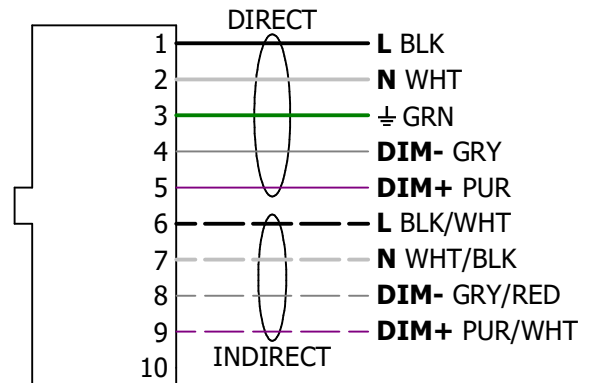

HILUME-H-ECO

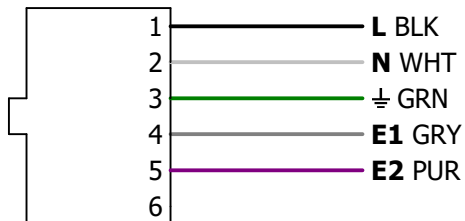

HILUME-H-ECO DIRECT/INDIRECT

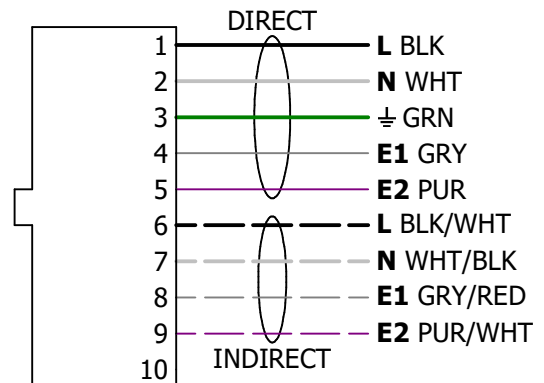

**Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com**