## INSTRUCTION SHEET



#### **OPTICS (BEAM) REPLACEMENT, C3M**

689-0604


PAGE 1 OF 1

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.


#### 1. REMOVE FRONT DOOR

TURN FRONT DOOR COUNTERCLOCK WISE AND REMOVE

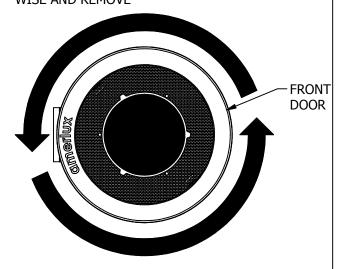


#### 2. COMPRESS CLIPS

COMPRESS BOTH CLIPS TO RELEASE OPTICS

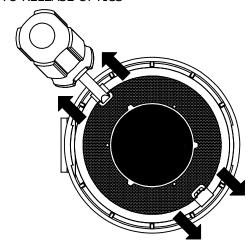


**WARNING:** IF USING A SCREW DRIVER OR ANOTHER TOOL, USE CAUTION NOT TO SCRATCH THE OPTIC.

### 3. REMOVE OPTIC

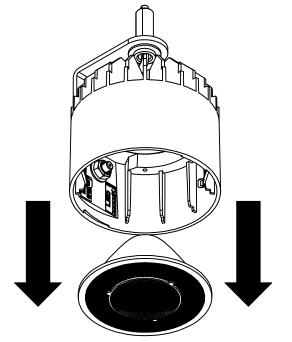

# 4. INSERT NEW OPTIC AND REASSEMBLE IN REVERSE ORDER

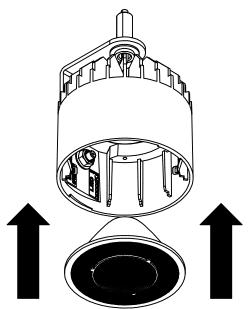

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com