



# INSTRUCTION SHEET

## ROOK CONDUIT CANOPY MOUNT, CORD SUSPENSION (CDC.C)


689-20102

PAGE 1 OF 1


**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**


- 1** THREAD CORD GRIP BASE INTO CROSSBAR
- 2** ATTACH CROSSBAR TO JUNCTION BOX (B.O.) WITH HARDWARE (B.O.)
- 3** FEED FIXTURE POWER CORD THROUGH CORD GRIP CAP, THEN CANOPY, THEN CORD GRIP BASE, ADJUSTING SUSPENSION HEIGHT. CUT AND STRIP EXCESS POWER CORD AS NEEDED.
- 4** SPLICE FIXTURE WIRES TO INCOMING WIRES
- 5** THREAD CORD GRIP CAP ONTO CORD GRIP BASE, SECURING CANOPY. REMOVE CANOPY KNOCKOUTS AS NEEDED.

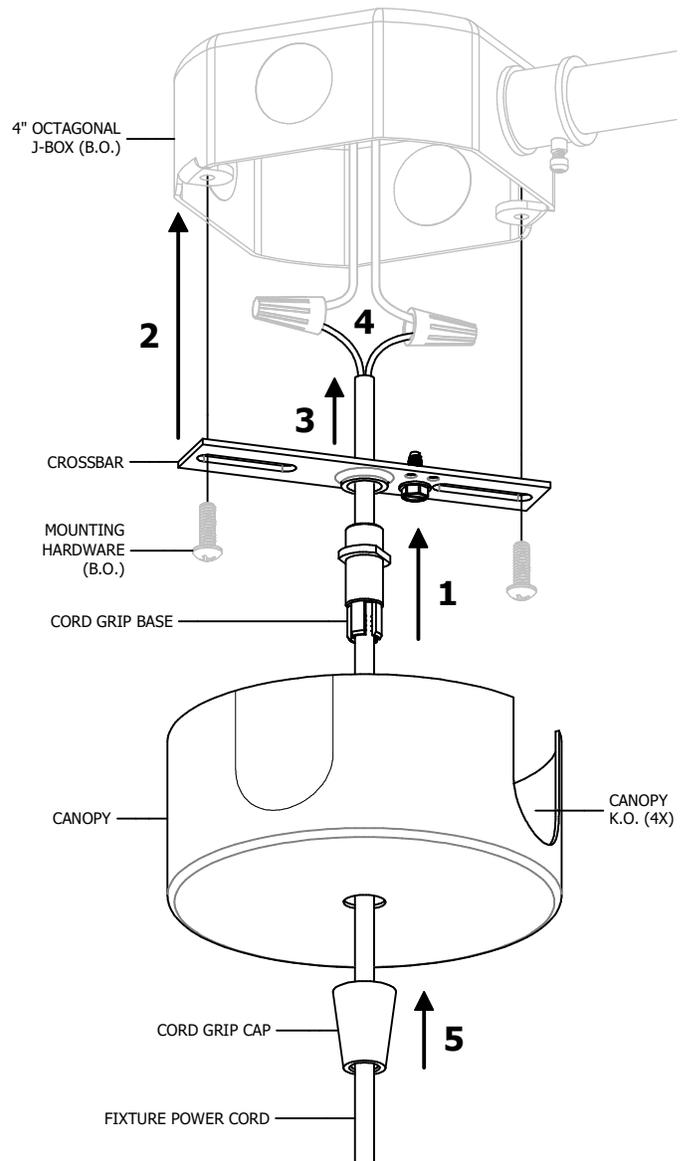


### 2-WIRE

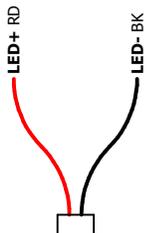


### 4-WIRE

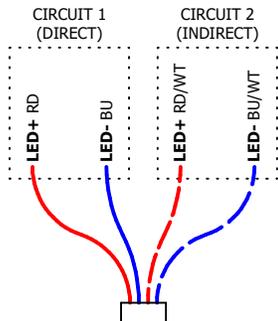

### 5-WIRE

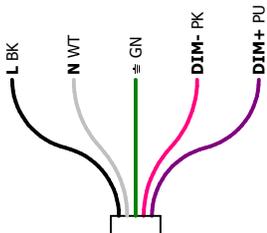

### 9-WIRE

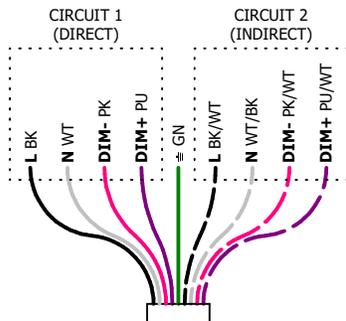

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 [www.amerlux.com](http://www.amerlux.com)

**INSTRUCTION SHEET**



**ROOK CONDUIT CANOPY MOUNT, RIGID STEM SUSPENSION (CDC.RS)**


**689-20103**

PAGE 1 OF 1


**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**


- 1** ATTACH CROSSBAR TO JUNCTION BOX (B.O.) WITH HARDWARE (B.O.)
- 2** IF NECESSARY, CUT BOTTOM OF STEM TO LENGTH. DO NOT CUT END WITH EXTERNAL THREADS.
- 3** FEED FIXTURE WIRES THROUGH STEM, THEN INSERT STEM INTO FIXTURE HUB & SECURE WITH HUB HARDWARE (2X)
- 4** SLIDE CANOPY OVER STEM, THREAD LOCKNUT ONTO STEM, THEN THREAD STEM INTO CROSSBAR & SECURE WITH LOCKNUT
- 5** SPLICE FIXTURE WIRES TO INCOMING WIRES
- 6** RAISE CANOPY TO MAGNETIC CROSSBAR, REMOVING CANOPY KNOCKOUTS AS NEEDED

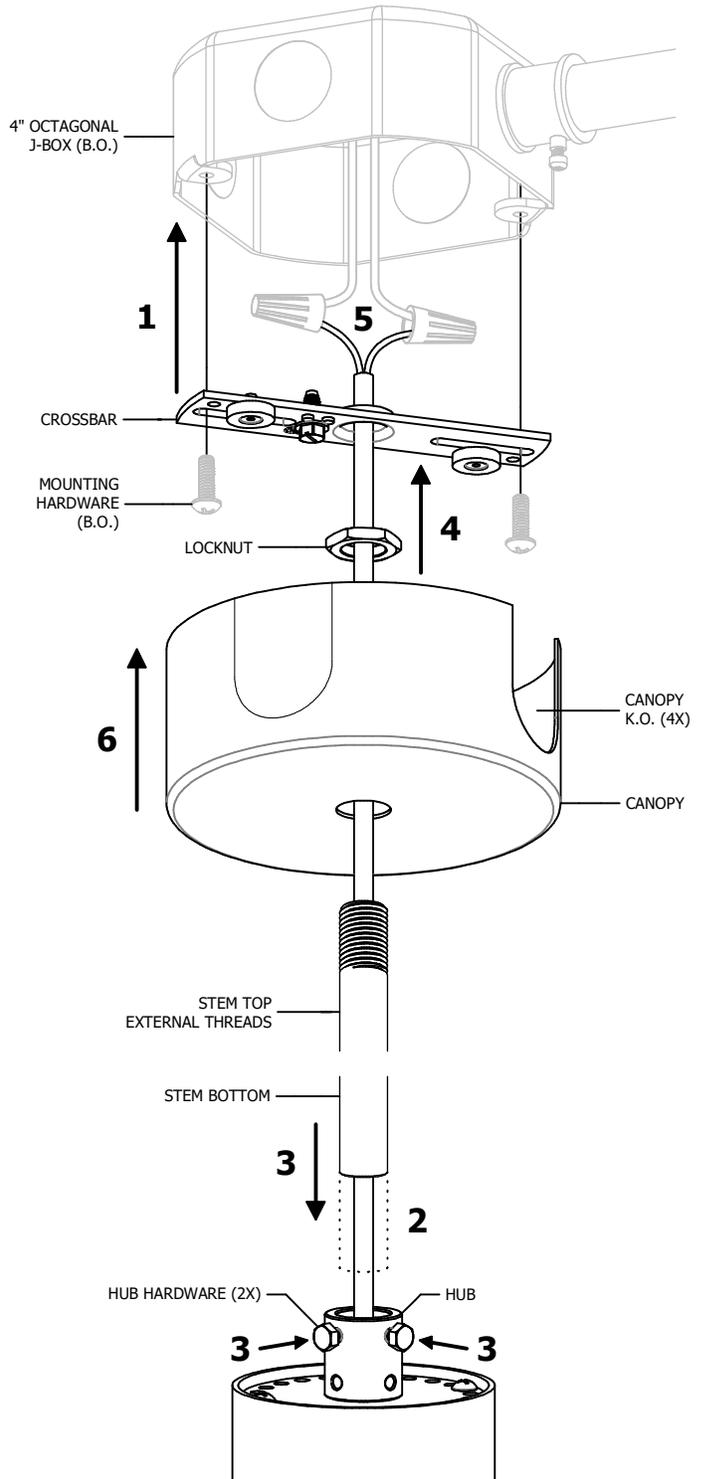


**2-WIRE**

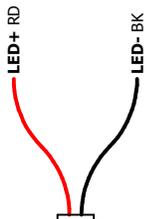


**4-WIRE**

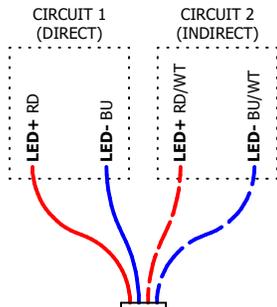

**5-WIRE**

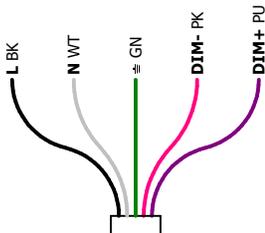

**9-WIRE**

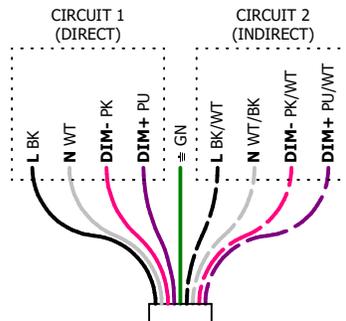

**Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com**

**INSTRUCTION SHEET**



**ROCK CONDUIT CANOPY MOUNT, SURFACE SUSPENSION (CDC.SM)**


**689-20104**

PAGE 1 OF 1


**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**


- 1** ATTACH CROSSBAR TO JUNCTION BOX (B.O.) WITH HARDWARE (B.O.)
- 2** ATTACH RING AND CANOPY TO CROSSBAR WITH MOUNTING SCREWS, REMOVING CANOPY KNOCKOUTS AS NEEDED
- 3** ATTACH FIXTURE SAFETY CABLE TO EITHER UNUSED HOLE IN RING
- 4** SPLICE FIXTURE WIRES TO INCOMING WIRES
- 5** RAISE FIXTURE TO RING AND ROTATE CLOCKWISE TO LOCK IN PLACE

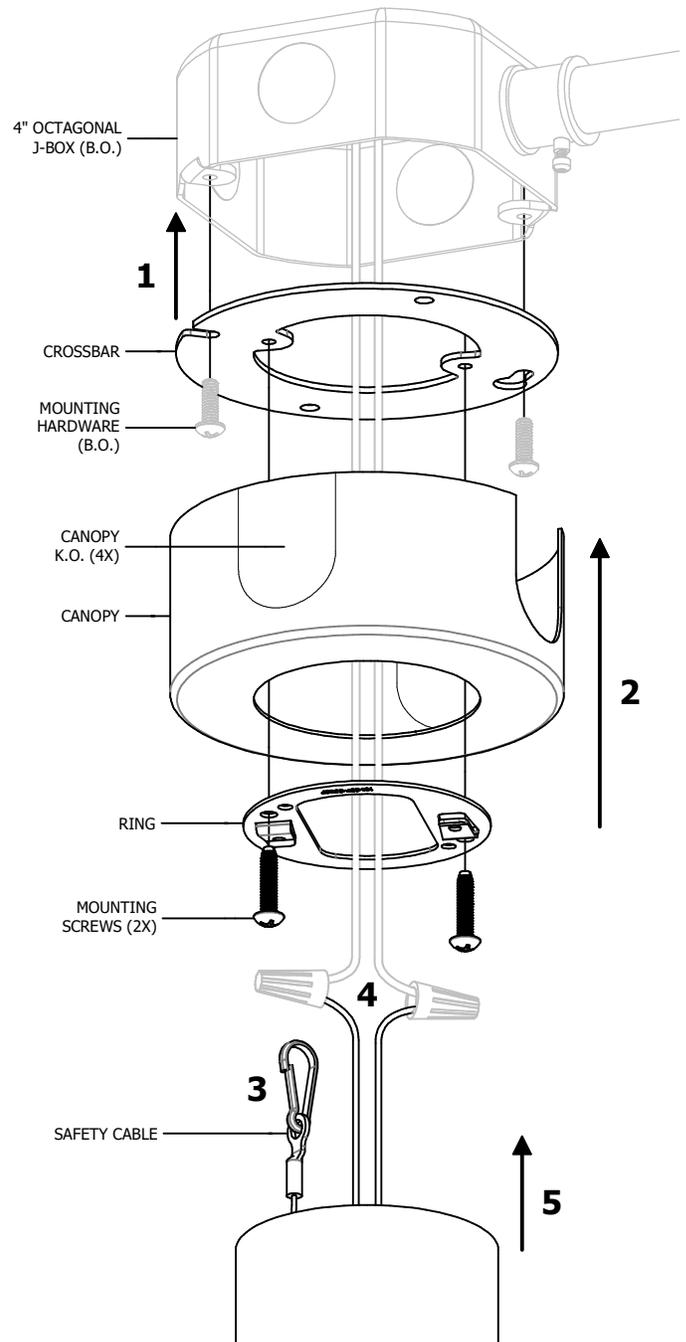

2-WIRE

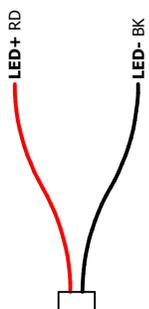

5-WIRE

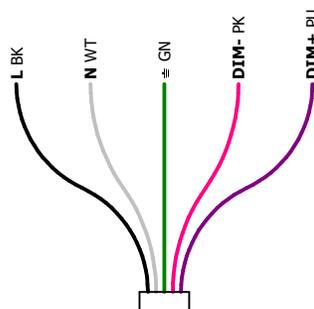

**Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 [www.amerlux.com](http://www.amerlux.com)**