






**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

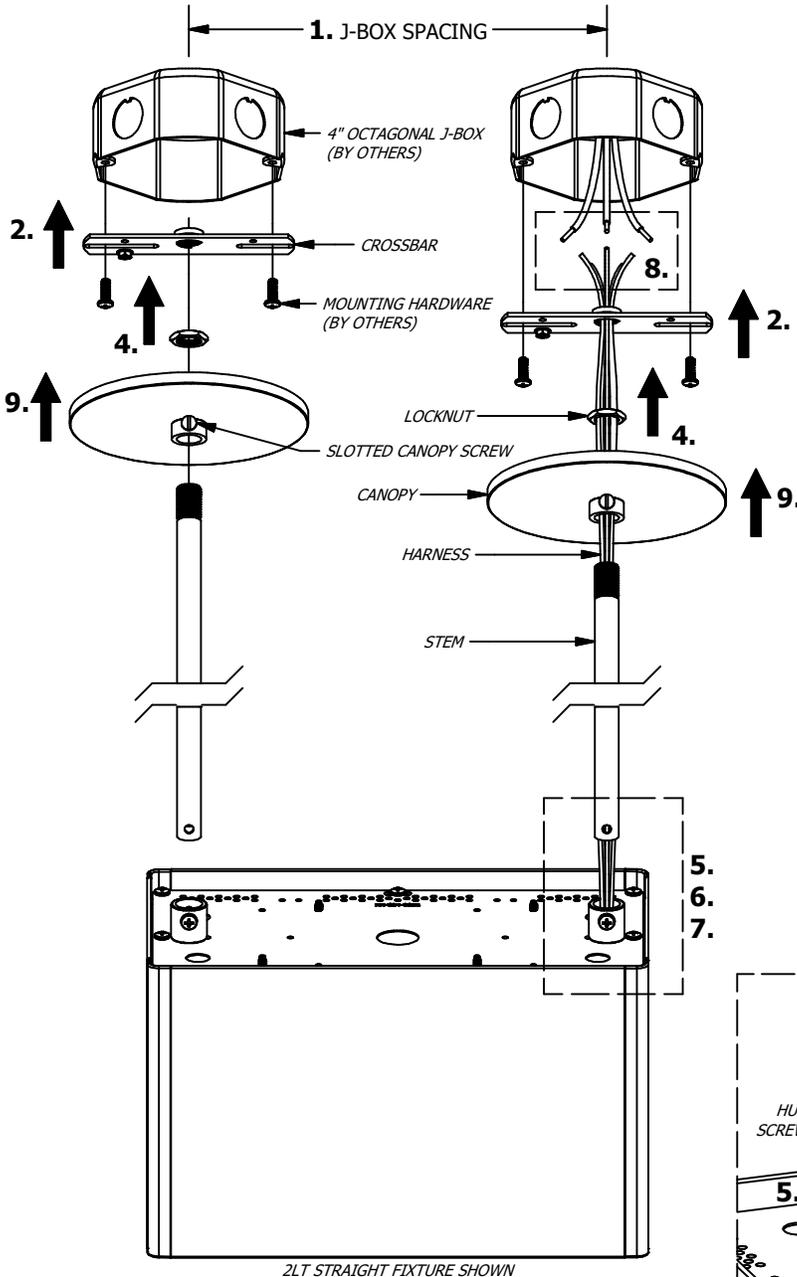

**1. J-BOX SPACING**

FIXTURE	SPACING (in)
2LT STRAIGHT	8 3/4
2LT CURVED	8 13/16
3LT STRAIGHT	13 1/4
3LT CURVED	13 1/2
4LT STRAIGHT	17 3/4
4LT CURVED	18 5/16

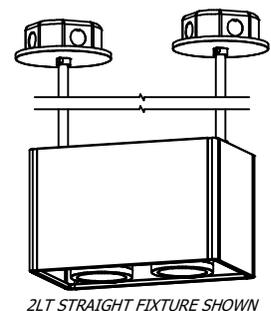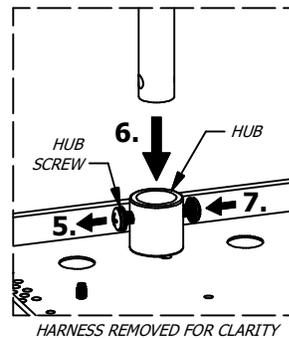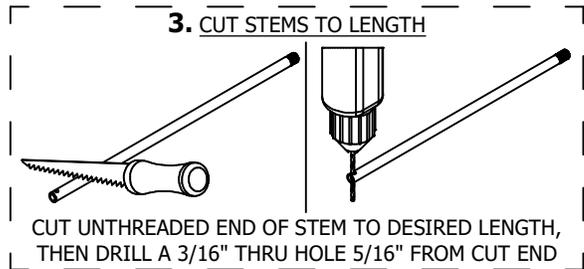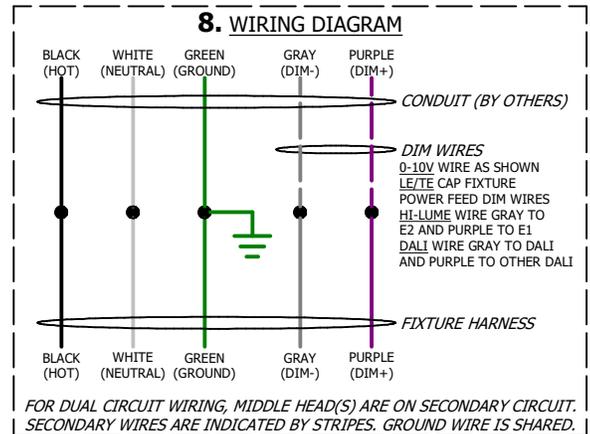

1. DETERMINE SUSPENSION POINTS AND INSTALL J-BOXES (BY OTHERS),
2. MOUNT KIT CROSSBARS TO J-BOXES WITH HARDWARE (BY OTHERS),
3. IF NECESSARY, CUT STEMS TO LENGTH,
4. THREAD STEMS INTO CROSSBARS AND SECURE WITH LOCKNUTS,
5. LOOSEN (DON'T REMOVE) HUB SCREWS (x4),
6. FEED HARNESS THROUGH STEM AND INSERT STEMS INTO HUBS,
7. TIGHTEN HUB SCREWS,
8. WIRE ACCORDING TO LOCAL AND NATIONAL CODE, THEN
9. SLIDE CANOPIES UP STEMS AND LOCK IN POSITION BY TIGHTENING SLOTTED CANOPY SCREWS.

**Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 [www.amerlux.com](http://www.amerlux.com)**