INSTRUCTION SHEET



ROOK CONDUIT CANOPY WALL MOUNT


689-0839


PAGE 1 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

- **1** FEED HOUSE WIRES THROUGH MOUNTING PLATE, THEN ATTACH PLATE TO J-BOX WITH HARDWARE (BY OTHERS)
- 2 REMOVE CANOPY KNOCKOUT(S) TO MATCH CONDUIT LAYOUT
- 3 FEED WIRES THROUGH CANOPY & CLEAT, THEN ATTACH BOTH TO MOUNTING PLATE WITH AMERLUX CLEAT SCREWS
- 4 WIRE MALE HARNESS FROM MOUNTING KIT TO HOUSE WIRES (SEE DIAGRAMS ON PAGE 2)
- 5 WHILE SUPPORTING FIXTURE, CONNECT MALE HARNESS TO FEMALE HARNESS FROM FIXTURE
- **6** FEED ELECTRICAL CONNECTION INTO J-BOX, LOCATE WALL ARM BRACKET PINS ONTO BACKSIDE OF CLEAT BOTTOM, THEN TILT FIXTURE UP AND TOWARDS WALL
- 7 FULLY TIGHTEN PHILLIPS SCREWS (x2) ON TOP OF WALL ARM BRACKET

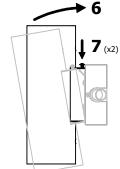

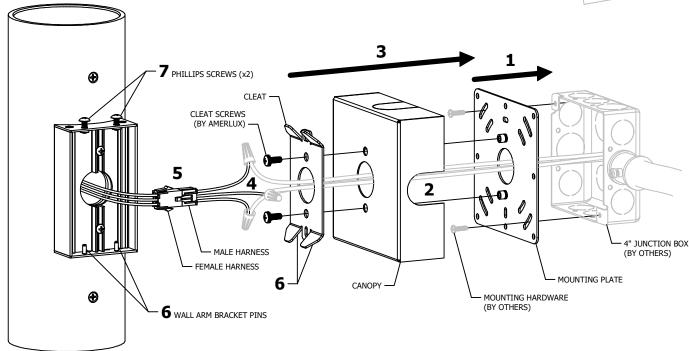

NOTES

A. FOR INDIRECT ONLY FIXTURE, USE INCLUDED "FLIP KIT"

B. FOR REMOTE OR POE DRIVER, JOIN INDIVIDUALLY LABELED WIRES USING SUPPLIED WAGO CONNECTORS

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

INSTRUCTION SHEET



ROOK CONDUIT CANOPY WALL MOUNT

689-0839

PAGE 2 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

