

INSTRUCTION SHEET




PENDANT MULTIPLE AIRCRAFT CABLE INSTALLATION

689-0660

PAGE 1 OF 1



WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

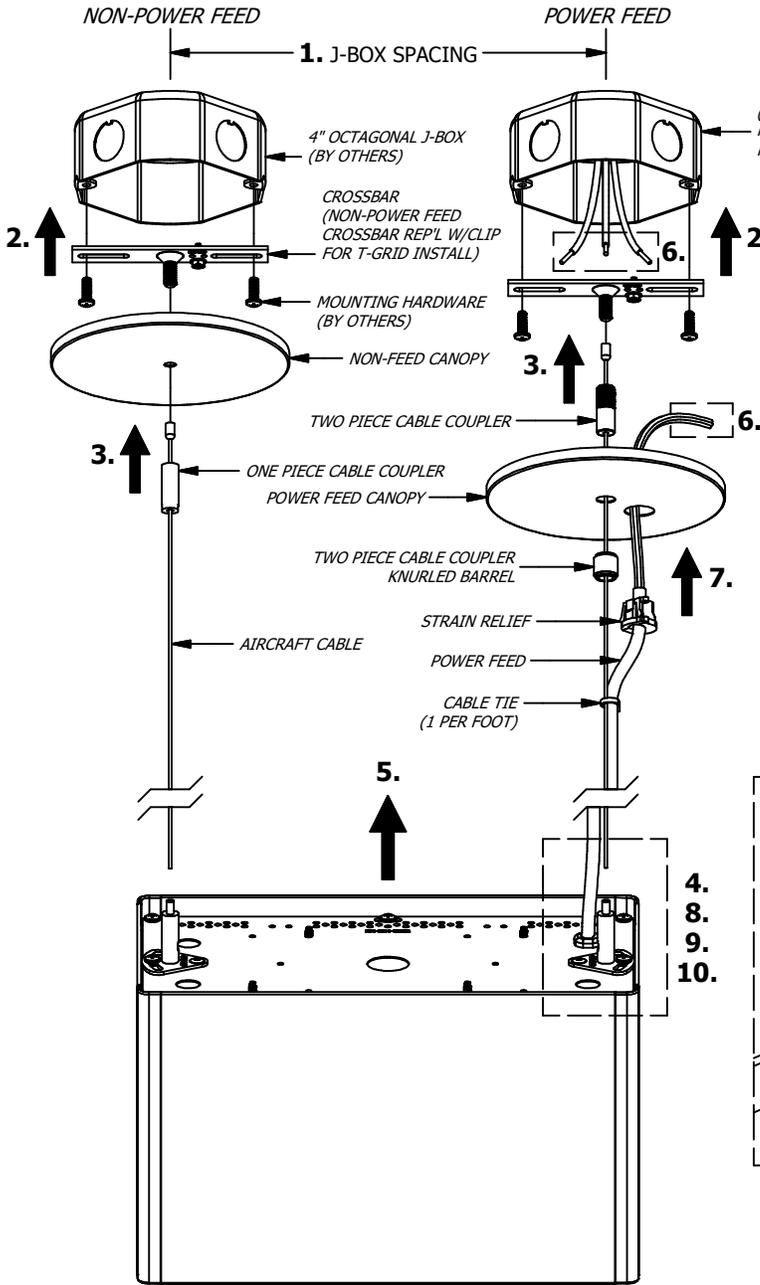


2LT STRAIGHT FIXTURE SHOWN

1. J-BOX SPACING	
FIXTURE	SPACING (in)
2LT STRAIGHT	9 1/8
2LT CURVED	9 3/16
3LT STRAIGHT	13 5/8
3LT CURVED	13 7/8
4LT STRAIGHT	18 1/8
4LT CURVED	18 5/8

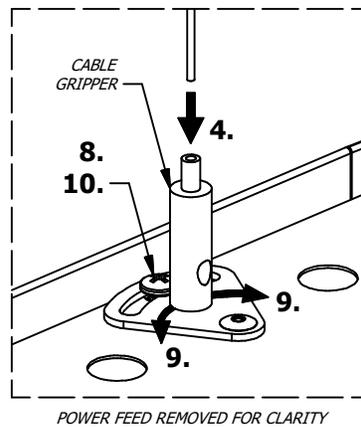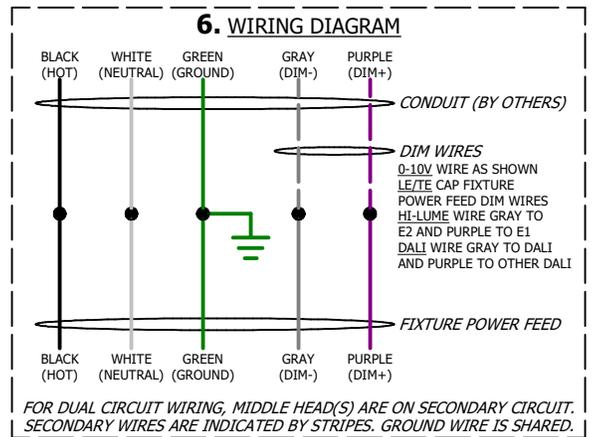

POWER FEED REMOVED FOR CLARITY

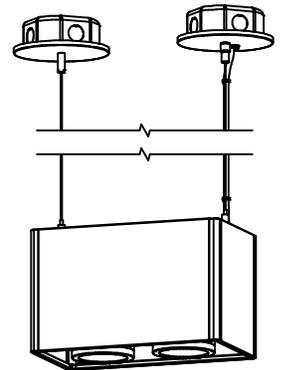

2LT STRAIGHT FIXTURE SHOWN

1. DETERMINE SUSPENSION POINTS AND INSTALL J-BOXES (BY OTHERS),
2. MOUNT KIT CROSSBARS TO J-BOXES WITH HARDWARE (BY OTHERS),
3. FEED AIRCRAFT CABLES THROUGH CABLE COUPLERS AND THREAD COUPLERS ONTO CROSSBARS,
4. FEED AIRCRAFT CABLES THROUGH CABLE GRIPPERS ON FIXTURE,
5. RAISE AND LEVEL FIXTURE,
6. WIRE POWER FEED ACCORDING TO LOCAL AND NATIONAL CODE, THEN
7. THREAD KNURLED BARREL TO TWO PIECE CABLE COUPLER TO INSTALL POWER FEED CANOPY. TO FINE-TUNE FIXTURE BALANCE AFTER AIMING (689-0667),
8. LOOSEN (DON'T REMOVE) SCREW (x2),
9. ADJUST SWIVEL BRACKET (x2) TO BALANCE FIXTURE, THEN
10. TIGHTEN SCREW.

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com