# INSTRUCTION SHEET



#### **ROOK WALL MAINTENANCE**

689-0841


PAGE 1 OF 1


WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.


## REMOVE FIXTURE FROM WALL

- 1 LOOSEN (DON'T REMOVE) PHILLIPS SCREWS (x2) ON TOP OF WALL ARM BRACKET
- **2** LIFT FIXTURE AND TILT TOP AWAY FROM WALL
- **3** WHILE SUPPORTING FIXTURE, UNDO ELECTRICAL CONNECTION (FOR REMOTE OR POE FIXTURE, UNDO INDIVIDUAL WIRE CONNECTIONS)



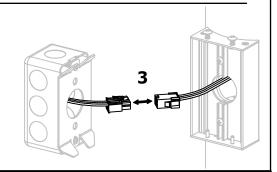


### **ACCESS TRIM**

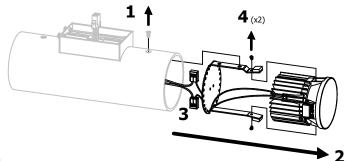


- 1 REMOVE TRIM SCREW ON BACK OF FIXTURE
- 2 REMOVE TRIM ASSEMBLY FROM FIXTURE
- 3 UNDO WIRE CONNECTIONS BETWEEN TRIM AND DRIVER
- 4 REMOVE SCREWS (x2) TO ISOLATE TRIM FROM BRACKET

#### **OPEN TRIM**

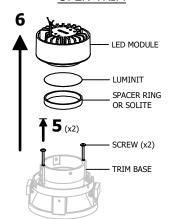


- **5** LOOSEN (DON'T REMOVE) SCREWS (x2)
- **6** ROTATE AND LIFT LED MODULE FROM BASE

#### LENSED TRIM

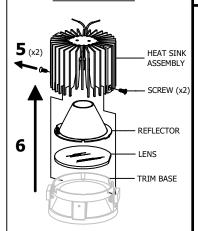


- **5** REMOVE SCREWS (x2)
- **6** LIFT HEAT SINK ASSEMBLY FROM BASE

## **ACCESS DRIVER**

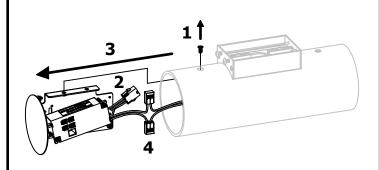

- 1 REMOVE DRIVER SCREW ON BACK OF FIXTURE
- **2** FEED WIRE HARNESS INTO FIXTURE CENTERHOLE
- 3 REMOVE DRIVER ASSEMBLY FROM FIXTURE
- 4 UNDO WIRE CONNECTIONS BETWEEN TRIM AND DRIVER

## ACCESS DIRECT/INDIRECT DRIVERS

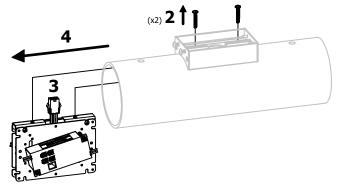

- 1 REMOVE BOTH TRIMS FROM FIXTURE
- 2 REMOVE SCREWS ON WALL ARM BRACKET
- **3** FEED WIRE HARNESS INTO FIXTURE CENTERHOLE
- 4 REMOVE DRIVER ASSEMBLY FROM FIXTURE

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com